


# Panasonic®

## Basic Operating Instructions Digital Camera

Model No. **DMC-FX700**

# LUMIX

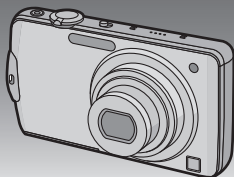

Before use, please read these instructions completely.



**Please also refer to the Operating Instructions (PDF format) contained on the CD-ROM (supplied).**



You can learn about advanced operation methods and check the Troubleshooting.

## Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

### Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

## Information for Your Safety

### WARNING:

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,**

- DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
- USE ONLY THE RECOMMENDED ACCESSORIES.
- DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

### ■ Product identification marking

Product	Location
Digital camera	Bottom
Battery charger	Bottom

## ■ About the battery pack

### **CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

### **Warning**

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

## ■ About the battery charger

### **CAUTION!**

- **DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.**
- **DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.**
- **DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.**
- **DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.**

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

## ■ Cautions for Use

- Do not use any other AV cables except the supplied one.
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).  
Part numbers: RP-CDHM15 (1.5 m), RP-CDHM30 (3.0 m)
- Do not use any other USB connection cables except the supplied one.

The optional HDMI mini cable is available only for DMC-FX700GC/DMC-FX700GH.

## Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC5G; optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

The optional AC adaptor is available only for DMC-FX700GC/DMC-FX700GH.


## Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.


## ■ How to replace the Fuse

The location of the fuse differ according to the type of AC cable (figures A and B). Confirm the AC cable fitted and follow the instructions below. Illustrations may differ from actual AC cable.

- 1 Open the fuse cover with a screwdriver.

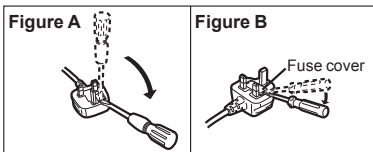

 - 2 Replace the fuse and close or attach the fuse cover.



**-If you see this symbol-**

**Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union.  
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



# Contents

Information for Your Safety .....	2
Standard Accessories .....	7
Names of the Components .....	8
How to Use the Touch Panel .....	10
Charging the Battery .....	12
About the Built-in Memory/the Card .....	14
Inserting and Removing the Card (optional)/the Battery .....	15
Setting Date/Time (Clock Set).....	16
• Changing the Clock Setting .....	16
Setting the Menu .....	17
Selecting the [REC] Mode.....	18
Taking Pictures Using the Automatic Function	
( <b>IA</b> : Intelligent Auto Mode) .....	19
• Scene Detection.....	20
• AF Tracking Function.....	20
Taking Pictures with Your Favourite Settings	
( <b>P</b> : Programme AE Mode) .....	21
Compensating the Exposure.....	22
Taking Pictures with Set Aperture ( <b>A</b> : Aperture-priority AE) .....	23
Taking Pictures with Set Shutter Speed ( <b>S</b> : Shutter-priority AE) .....	24
Taking Pictures with Exposure Set Manually	
( <b>M</b> : Manual exposure) .....	25
Taking Pictures using Burst Mode .....	26
Recording Motion Pictures .....	27
Playing Back Pictures ([NORMAL PLAY]) .....	28
Deleting Pictures .....	28
Reading the Operating Instructions (PDF format).....	29
Specifications .....	31

# Standard Accessories


 








Check that all the accessories are supplied before using the camera.  
Product numbers correct as of July 2010. These may be subject to change.

- 1 Battery Pack  
(Indicated as **battery pack** or **battery** in the text)  
Charge the battery before use.
- 2 Battery Charger  
(Indicated as **battery charger** or **charger** in the text)
- 3 AC Cable
  - Ⓐ: Hong Kong Special Administrative Region of China and Saudi Arabia
  - Ⓑ: Areas Other than Hong Kong Special Administrative Region of China and Saudi Arabia
- 4 USB Connection Cable
- 5 AV Cable
- 6 CD-ROM
  - Software:  
Use it to install the software to your PC.
  - Operating Instructions
- 7 Hand Strap
- 8 Battery Case
- 9 Stylus Pen

- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.


- **The card is optional.**  
**You can record or play back pictures on the built-in memory when you are not using a card.**

 - Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)


1		DMW-BCF10E
2		DE-A60B (DMC-FX700GC/ DMC-FX700GH) DE-A60E (DMC-FX700SG)
3		Ⓐ: K2CT39A00002 (DMC-FX700GC/ DMC-FX700GH)
		Ⓑ: K2CQ29A00002 (DMC-FX700GC)
		K2CA29A00023 (DMC-FX700SG)
4		K1HA08AD0002
5		K1HA08CD0028
6		VFF0690 (DMC-FX700GC/ DMC-FX700GH) VFF0689 (DMC-FX700SG)
7		VFC4297
8		VGQ0D56
9		VGQ0C14

# Names of the Components


- 1 Flash
- 2 Lens
- 3 Self-timer indicator  
AF Assist Lamp
- 4 Hand strap eyelet
  - Be sure to attach the hand strap when using the camera to ensure that you will not drop it.

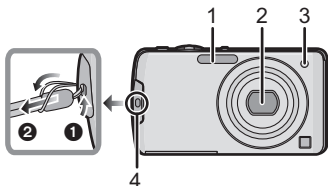

- 5 Touch panel/LCD monitor
- 6 [REC]/[PLAYBACK] selector switch
- 7 [MODE] button
- 8 [MENU] button

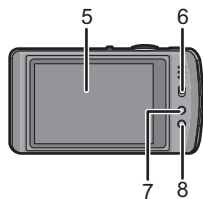


- 9 Speaker
- 10 Camera ON/OFF switch
- 11 Zoom lever
- 12 Motion picture button
- 13 Microphone
- 14 Shutter button

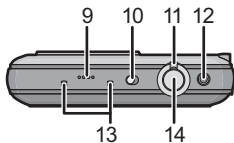




- 15 Lens barrel
- 16 [HDMI] socket
- 17 [AV OUT/DIGITAL] socket

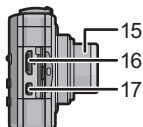

- 18 Tripod receptacle
  - When you use a tripod, make sure the tripod is stable when the camera is attached to it.
- 19 Card/Battery door
- 20 Release lever

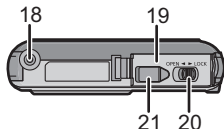

- 21 DC coupler cover
  - When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC4; optional) and AC adaptor (DMW-AC5G; optional) are used.
  - Always use a genuine Panasonic AC adaptor (DMW-AC5G; optional).
  - When using an AC adaptor, use the AC cable supplied with the AC adaptor.
  - We recommend you use a battery with sufficient battery power or the AC adaptor when recording motion pictures.
  - If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

The optional AC adaptor and DC coupler are available only for DMC-FX700GC/DMC-FX700GH.

# How to Use the Touch Panel

This touch panel is a type that detects pressure.

Operation or settings are performed by directly touching the icons displayed on the LCD monitor (touch panel) or by moving while touching the touch panel (dragging) using your fingers or the supplied stylus pen.

## Touch the screen

To touch and release the touch panel.



Use this to perform tasks such as selecting icons or images displayed on the touch panel.

You can make settings by touching the items displayed on the screen.

You can exit without saving the settings by touching [CANCEL].

- It may not operate properly when multiple icons are touched simultaneously, so try to touch the centre of the icon.

## Drag

A movement without releasing the touch panel.



This is used when performing tasks such as moving to the next image by dragging horizontally, or changing the range of the displayed image.

This can also be used to perform tasks such as switching the screen by operating the slide bar.

- If you select wrong icon, you can drag to different icon, and select that icon by releasing your finger.

## Note

- The touch panel does not operate when the LCD monitor is turned off.
- If you use a commercially available liquid crystal protection sheet, please follow the instructions that accompany the sheet. (Some liquid crystal protection sheets may impair visibility or operability.)
- **Apply a little extra pressure** when touching if you have a commercially available protection sheet affixed or if you feel it is not responding well.
- Touch panel will not operate properly when the hand holding this unit is pressing on the touch panel.
- Do not press using anything with a sharp tip or anything hard, except for the supplied stylus pen.
- Do not operate with your fingernails.
- Wipe the LCD monitor with dry soft cloth when it gets dirty with finger prints and others.
- Do not scratch or press the LCD monitor too hard.



## ■ About the Stylus pen

It is easier to use the stylus pen (supplied) for detailed operation or if it is hard to operate with your fingers.

- Do not place it where small children can reach.
- Do not place the stylus pen on the LCD monitor when storing. LCD monitor may break when the stylus pen is pressed strongly against the LCD monitor.



## Charging the Battery

### ■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BCF10E.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards.

There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


- Use the dedicated charger and battery.
- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery (DMW-BCF10E) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

### ■ Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.
- It is recommended to charge the battery in a temperature between 10 °C to 30 °C. (The battery temperature should also be the same.)


1

**Attach the battery paying attention to the direction of the battery.**

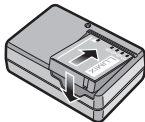

**2****Connect the AC cable.**

 - Disconnect the charger from the electrical socket and detach the battery after charging is completed.

**■ About the [CHARGE] indicator****The [CHARGE]**

**indicator turns on:** The [CHARGE] indicator (A) is turned on and charging will start.

**The [CHARGE]**

**indicator turns off:** The [CHARGE] indicator (A) of the charger will turn off once the charging has completed without any problem.

**• When the [CHARGE] indicator flashes**

- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C to 30 °C.
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

**■ Charging time**

<b>Charging time</b>	<b>Approx. 130 min</b>
----------------------	------------------------

**■ Approximate operating time and number of recordable pictures**

<b>Number of recordable pictures</b>	<b>Approx. 300 pictures</b>
<b>Recording time</b>	<b>Approx. 150 min</b>
<b>Playback time</b>	<b>Approx. 200 min</b>

**Recording conditions by CIPA standard**

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Programme AE Mode
- Temperature: 23 °C/Humidity: 50%RH when LCD monitor is on.
- Using a Panasonic SD Memory Card (32 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer function is set to [AUTO].)
- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

# About the Built-in Memory/the Card

## Built-in Memory

### • Memory size: Approx. 40 MB

- The built-in memory can be used as a temporary storage device when the card being used becomes full.
- The access time for the built-in memory may be longer than the access time for a card.

## Card

The following cards which conform to the SD video standard can be used with this unit.

(These cards are indicated as **card** in the text.)

Type of card which can be used with this unit	Remarks
SD Memory Card (8 MB to 2 GB)	• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment. • SDXC Memory Card can only be used with SDXC Memory Card compatible equipment. • Check that the PC and other equipment are compatible when using the SDXC Memory Cards. <a href="http://panasonic.net/avc/sdcard/information/SDXC.html">http://panasonic.net/avc/sdcard/information/SDXC.html</a>
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

- Only cards bearing the SDHC logo (indicating that the card conforms to SD video standards) may be used as 4 GB to 32 GB cards.
- Only cards bearing the SDXC logo (indicating that the card conforms to SD video standards) may be used as 48 GB, 64 GB cards.
- Use a card with SD Speed Class\* with "Class 4" or higher when recording motion pictures in [AVCHD]. Also, use a card with SD Speed Class with "Class 6" or higher when recording motion pictures in [MOTION JPEG].  
\* SD Speed Class is the speed standard regarding continuous writing.
- Please confirm the latest information on the following website.  
<http://panasonic.jp/support/global/cs/dsc/>  
(This Site is English only.)



### Note

- Keep the Memory Card out of reach of children to prevent swallowing.

# Inserting and Removing the Card (optional)/the Battery

- Check that this unit is turned off.
- We recommend using a Panasonic card.

**1** Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries (DMW-BCF10E).
- If you use other batteries, we cannot guarantee the quality of this product.

**2** **Battery:** Insert until it is locked by the lever (A) being careful about the direction you insert it. Pull the lever (A) in the direction of the arrow to remove the battery.




**Card:** Push it fully until it clicks being careful about the direction you insert it. To remove the card, push the card until it clicks, then pull the card out upright.

(B): Do not touch the connection terminals of the card.

- The card may be damaged if it is not fully inserted.

**3** **1:** Close the card/battery door.


**2:** Slide the release lever in the direction of the arrow.

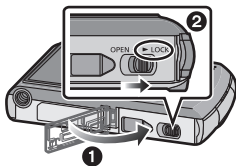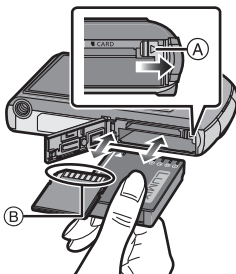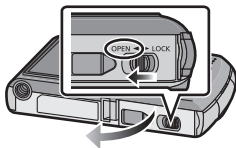

# Setting Date/Time (Clock Set)

• The clock is not set when the camera is shipped.

 
**1** Turn the camera on.



**2** Touch [LANGUAGE SET].

**3** Select the language.

**4** Touch [CLOCK SET].

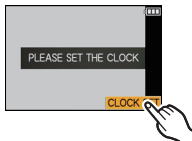

**5** Touch the items you wish to set (Year/Month/Day/Hours/Minutes), and set using [▲]/[▼].

• Touch [CANCEL] to cancel the date and time settings without setting a date and time.



**6** Touch [SET] to set.



**7** Touch [SET].

• Touch [CANCEL] to return to the settings screen.

## Changing the Clock Setting

Select [CLOCK SET] in the [REC] or [SETUP] menu.

• It can be changed in steps **5** and **6** to set the clock.



# Setting the Menu

 
This section describes how to select the Programme AE Mode settings, and the same setting can be used for the [MOTION PICTURE] Mode menu, [PLAYBACK] Mode menu and [SETUP] menu as well.

Example: Setting [AF MODE] from [ ] to [ ] in the Programme AE Mode

**1** Press [MENU] to display the menu.




**2** Touch [AF MODE].




**3** Touch [ ].

 - Depending on the item, its setting may not appear or it may be displayed in a different way.



**4** Touch [EXIT] to close the menu.

 - You can also press the shutter button halfway to close the menu.




## Switching to other menus

e.g.: Switching to the [SETUP] menu

Touch the [SETUP] menu icon [ ].

 
- Select a menu item next and set it.



## Selecting the [REC] Mode

### 1 Turn the camera on.

- (A) [REC]/[PLAYBACK] selector switch
- (B) [MODE] button

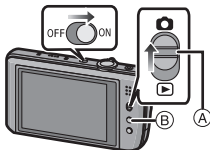

### 2 Slide the [REC]/[PLAYBACK] selector switch to [📷], and then press [MODE].

### 3 Touch the mode.

#### ■ List of [REC] Modes

#### **iA** [INTELLIGENT AUTO]

The subjects are recorded using settings automatically selected by the camera.

#### **P** [PROGRAM AE]

The subjects are recorded using your own settings.

#### **A** [APERTURE PRIORITY]

The shutter speed is automatically determined by the aperture value you set.

#### **S** [SHUTTER PRIORITY]

The aperture value is automatically determined by the shutter speed you set.

#### **M** [MANUAL EXPOSURE]

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

#### **SCN** [SCENE MODE]

This allows you to take pictures that match the scene being recorded.

[REC] Mode: **iA**


## Taking Pictures Using the Automatic Function

(**iA**): Intelligent Auto Mode)

The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.

**1** Slide the [REC]/[PLAYBACK] selector switch to **[CAMERA]**, and then press [MODE].

- (A) [REC]/[PLAYBACK] selector switch
- (B) [MODE] button
- (C) Shutter button

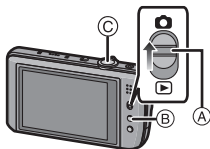


**2** Touch [INTELLIGENT AUTO].



**3** Hold this unit gently with both hands, keep your arms still at your side and stand with your feet slightly apart.

**4** Press the shutter button halfway to focus.

- The focus indication ① (green) lights when the subject is focused.
- The AF area ② is displayed around the subject's face by the Face Detection function. In other cases, it is displayed at the point on the subject which is in focus.
- The focus range is 3 cm (Wide)/1 m (Tele) to  $\infty$ .

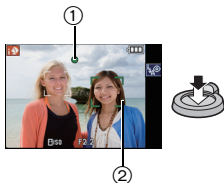









**5** Press the shutter button fully (push it in further), and take the picture.



## Scene Detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

 →  [i-PORTRAIT]
 [i-SCENERY]
 [i-MACRO]
 [i-NIGHT PORTRAIT]
 [i-NIGHT SCENERY]
 [i-SUNSET]
 [i-BABY]

• Only when [iA] is selected

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [iA], [iA] or [iA] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. (**Face Detection**)

## AF Tracking Function

 
It is possible to set the focus and exposure to the specified subject. Focus and exposure will keep following the subject automatically even if it moves.

### 1 Touch the subject.

- AF Tracking frame will be displayed in yellow, and it will determine the most appropriate scene for the locked subject.
- AF Tracking is cancelled when [OFF] is touched.



### 2 Press the shutter button halfway to focus and then press it fully to take the picture.



[REC] Mode: **P**

## Taking Pictures with Your Favourite Settings


(**P**): Programme AE Mode)

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in the [REC] menu.

**1** Slide the [REC]/[PLAYBACK] selector switch to [📷], and then press [MODE].

- (A) [REC]/[PLAYBACK] selector switch
- (B) [MODE] button

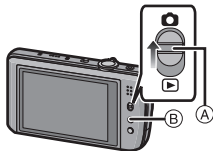

**2** Touch [PROGRAM AE].



**3** Aim the AF area at the point you want to focus on.

**4** Press the shutter button halfway to focus.

- The focus range is 50 cm (Wide)/1 m (Tele) to ∞.



**5** Press the halfway pressed shutter button fully to take a picture.



## Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background.

**1** Touch [  ].



**2** Adjust the exposure by touching the slide bar.

- Select [0 EV] to return to the original exposure.



**3** Touch [EXIT] to finish.

- You can also press the shutter button halfway to finish.

[REC] Mode: **A**

## Taking Pictures with Set Aperture

**(A)**: Aperture-priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.


**1** Slide the [REC]/[PLAYBACK] selector switch to [📷], and then press [MODE].

**2** Touch [APERTURE PRIORITY].

**3** Touch [APERTURE VALUE] **(A)**.



**4** Drag the aperture set bar **(B)**.

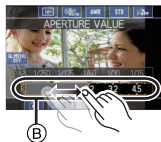

**5** Touch [Q-MENU OFF] to close the Quick Menu.

**6** Take the pictures.

[REC] Mode: **S**

## Taking Pictures with Set Shutter Speed

(**S**: Shutter-priority AE)

When you want to take a sharp picture of a fast moving subject, set to a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

- 1** Slide the [REC]/[PLAYBACK] selector switch to [📷], and then press [MODE].
- 2** Touch [SHUTTER PRIORITY].
- 3** Touch [SHUTTER SPEED] (A).
- 4** Drag the shutter speed set bar (B).
- 5** Touch [Q-MENU OFF] to close the Quick Menu.
- 6** Take the pictures.





[REC] Mode: **M**

## Taking Pictures with Exposure Set Manually

(**M**): Manual exposure)

Determine the exposure by manually setting the aperture value and the shutter speed.


**1** Slide the [REC]/[PLAYBACK] selector switch to [📷], and then press [MODE].

**2** Touch [MANUAL EXPOSURE].

**3** Touch [APERTURE VALUE] (A) or [SHUTTER SPEED] (B).



**4** Drag the aperture set bar (C) or shutter speed set bar (D).

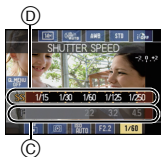

**5** Touch [Q.MENU OFF] to close the Quick Menu.

**6** Take the pictures.

- The Manual Exposure Assistance appears for about 10 seconds to indicate the exposure when the shutter button is pressed halfway.
- Set the aperture value and the shutter speed again when the exposure is not adequate.

## Taking Pictures using Burst Mode

Pictures are taken continuously while the shutter button is pressed. Select the ones you really like from among the pictures you have taken. Burst speed can be selected to match the recording conditions or subjects. Pictures recorded in Burst Mode will be recorded as a burst picture group.

**1** Touch **[OFF]**.



**2** Touch the item.



Burst speed	
<b>[i]</b>	2 pictures/second, 5 pictures/second, 10 pictures/second
<b>[2AF]</b>	2 pictures/second
<b>[5AF]</b>	5 pictures/second
<b>[10]</b>	10 pictures/second
<b>[40]</b>	40 pictures/second
<b>[60]</b>	60 pictures/second

**3** Touch **[EXIT]** to finish.

- You can also press the shutter button halfway to finish.

 
**4** Focus on the subject and take a picture.

## Recording Motion Pictures

This can record full high definition motion pictures compatible with the AVCHD format or motion pictures recorded in Motion JPEG. Audio will be recorded in stereo.

**1** Slide the [REC]/[PLAYBACK] selector switch to **[📷]**, and then press **[MODE]**.

- (A) Motion picture button
- (B) [REC]/[PLAYBACK] selector switch
- (C) [MODE] button




**2** Touch the mode.



**3** Start recording by pressing the motion picture button.

- (D) Available recording time
- (E) Elapsed recording time
- Release the motion picture button right after you press it.
- The recording state indicator (red) (F) will flash while recording motion pictures.

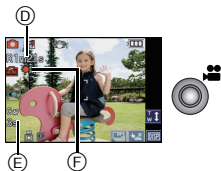

**4** Stop the recording by pressing the motion picture button again.

- If the built-in memory or the card becomes full in the middle of recording, the camera stops recording automatically.


### Note

- Motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen.
- Maximum time to record motion pictures continuously with [AVCHD] is 13 hours 3 minutes 20 seconds. Screen will only display up to 13 hours 3 minutes 20 seconds. However, the recording may stop before that depending on the remaining battery level.


[PLAYBACK] Mode: 

## Playing Back Pictures ([NORMAL PLAY])

- 1 Slide the [REC]/[PLAYBACK] selector switch  to .

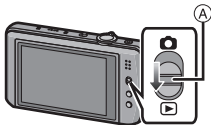


- 2 Forward or rewind the image by dragging the screen horizontally.

- After selecting the motion picture, touch  to start playback.



[PLAYBACK] Mode: 

## Deleting Pictures

Once deleted, pictures cannot be recovered. (For example, if you delete a burst picture group with , all the pictures in that group are deleted.)

- Pictures on the built-in memory or the card, that are being played back will be deleted.

- 1 Select the picture to be deleted, and then touch .



- 2 Touch [DELETE SINGLE].

- 3 Touch [YES].



# Reading the Operating Instructions (PDF format)

- You have practised the basic operations introduced in these operating instructions and want to progress to advanced operations.
- You want to check the Troubleshooting.

In these kinds of situations refer to Operating Instructions (PDF format) contained on the CD-ROM (supplied).

## ■ For Windows


**1** Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).

**2** Click the [Operating Instructions].

**3** Select the desired language and then click [Operating Instructions] to install.


Ⓐ To return to the install menu.

**4** Double click the “Operating Instructions” shortcut icon on the desktop.

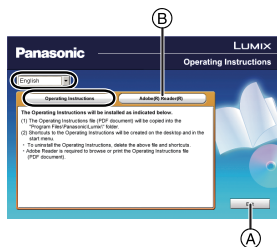

## ■ When the Operating Instructions (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Operating Instructions (PDF format).

Insert the CD-ROM containing the Operating Instructions (supplied), click  and then follow the messages on the screen to install.

(Compatible OS: Windows 2000 SP4/Windows XP SP2 or SP3/Windows Vista SP1 or SP2/Windows 7)

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.

<http://get.adobe.com/reader/otherversions>

## ■ To uninstall the Operating Instructions (PDF format)

Delete the PDF file from the “Program Files\Panasonic\Lumix\” folder.

- When the contents in the Program Files folder cannot be displayed, click the [Show the contents of this folder] to display them.

## ■ For Macintosh

- 1** Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
- 2** Open the “Manual” folder in the CD-ROM and then copy the PDF file with the desired language inside the folder.
- 3** Double click the PDF file to open it.

## Specifications

**Digital Camera:** Information for your safety

**Power Source:** DC 5.1 V

**Power**

**Consumption:** 1.4 W (When recording)  
1.0 W (When playing back)

**Camera effective pixels:**

14,100,000 pixels

**Image sensor:**

1/2.33" MOS sensor, total pixel number 15,100,000 pixels,  
Primary colour filter

**Lens:**

Optical 5× zoom, f=4.3 mm to 21.5 mm  
(35 mm film camera equivalent: 24 mm to 120 mm)/  
F2.2 (Wide) to F5.9 (Tele)

**Digital zoom:**

Max. 4×

**Extra optical zoom:**

Max. 10.5×

(When set to 3,000,000 pixels [3M] or less)

**Focus range:**

Normal: 50 cm (Wide)/1 m (Tele) to ∞

Macro/Intelligent Auto:

3 cm (Wide)/1 m (Tele) to ∞

Scene Mode: There may be differences in the above settings.

**Shutter system:**

Electronic shutter+Mechanical shutter

<b>Burst recording</b>	Burst speed (Burst number/maximum recordable pixels)
<b>For mechanical shutter:</b>	2 frames/sec (Max. 100 frames/14 M), 5 frames/sec (Max. 100 frames/14 M), 10 frames/sec (Max. 15 frames/14 M)
<b>For electronic shutter:</b>	40 frames/sec (Max. 50 frames/5 M), 60 frames/sec (Max. 60 frames/3.5 M)
<b>During motion picture recording:</b>	2 frames/sec (Max. 40 frames/3.5 M), 5 frames/sec (Max. 40 frames/3.5 M), 10 frames/sec (Max. 40 frames/3.5 M)
<b>Minimum illuminance:</b>	Approx. 6 lx (when i-low light is used)
<b>Shutter speed:</b>	60 seconds to 1/2000th of a second [STARRY SKY] Mode: 15 seconds, 30 seconds, 60 seconds
<b>Exposure (AE):</b>	Programme AE (P)/Aperture-Priority AE (A)/ Shutter-Priority AE (S)/Manual Exposure (M) Exposure compensation (1/3 EV Step, -2 EV to +2 EV)
<b>Metering mode:</b>	Multiple/Centre weighted/Spot
<b>LCD monitor:</b>	3.0" TFT LCD (3:2) (Approx. 230,000 dots) (field of view ratio about 100%) Touch panel
<b>Flash:</b>	Flash range: [ISO AUTO] Approx. 60 cm to 7.4 m (Wide)
<b>Microphone:</b>	Stereo
<b>Speaker:</b>	Monaural
<b>Recording media:</b>	Built-in Memory (Approx. 40 MB)/SD Memory Card/ SDHC Memory Card/SDXC Memory Card
<b>Recording file format</b>	
<b>Still Picture:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)/DPOF corresponding
<b>Pictures with audio:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)+ "QuickTime"
<b>Motion pictures with audio:</b>	AVCHD/QuickTime Motion JPEG



## Interface

**Digital:** "USB 2.0" (High Speed)

**Analogue video/  
audio:**

NTSC/PAL Composite (Switched by menu)  
Audio line output (monaural)

## Terminal

**[AV OUT/DIGITAL]:** Dedicated jack (8 pin)

**[HDMI]:** MiniHDMI TypeC

**Dimensions:** Approx. 103.5 mm (W)×55.8 mm (H)×24.5 mm (D)  
(excluding the projecting parts)

**Mass:** Approx. 176 g (with card and battery)

Approx. 155 g (excluding card and battery)

## Operating

**temperature:** 0 °C to 40 °C

**Operating humidity:** 10%RH to 80%RH

## Battery Charger (Panasonic DE-A60B) (DMC-FX700GC/DMC-FX700GH):

Information for your safety

**Input:** 110 V to 240 V ~ 50/60 Hz, 0.2 A

**Output:** 4.2 V === 0.65 A

## Battery Charger (Panasonic DE-A60E) (DMC-FX700SG):

Information for your safety

**Input:** 100 V to 240 V ~ 50/60 Hz, 0.2 A

AC 100 V - 240 V, 50/60 Hz, 15 VA (for Japan)

**Output:** 4.2 V === 0.65 A

DC 4.2 V, 0.65 A (for Japan)

## Battery Pack (lithium-ion)

(Panasonic

**DMW-BCF10E):** Information for your safety

**Voltage/capacity:** 3.6 V/940 mAh

- SDXC Logo is a trademark of SD-3C, LLC.
- The "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

**AVCHD**™

**VIESA**  
Link

**HDMI**

**DOLBY**  
DIGITAL  
STEREO CREATOR



Panasonic Corporation

Web Site: <http://panasonic.net>

© Panasonic Corporation 2010