

Panasonic[®]

TH-42AS700A

TH-50AS700A

TH-55AS700A

TH-60AS700A

***e*HELP**

my Home Screen

my Home Screen

• Information	11
• How to use	12
• Settings	13
• OSD Colour	15

APPS List

• Information	16
• How to use	16
• Settings	17

Watching

Basic

• Basic connection	18
• Selecting channel	20
• Information banner	21
• Option Menu	23
• Subtitle	24
• Last view	24
• Off Timer	24
• Energy saving functions	25
• Adjusting time	26

External equipment

• External connection	28
• Watching external input	31
• Operating with TV's remote control	32
• HDMI features	33
• Valid input signals	35

For best picture

• Viewing Mode	36
• Ambient Sensor	37
• Aspect	37
• Basic settings	38

• Noise reduction settings	39
• Advanced Settings	40
• Option Settings	43
• Screen Settings	44
• Copy Adjustment	45
For best audio	
• Sound mode	46
• Basic settings	46
• Volume settings	48
• Voice Guidance Settings	49
• Audio Description	50
• Advanced settings	51
TV Guide	
• Using TV Guide	54
• Timer Programming	56
3D	
• Note	57
• 3D Eyewear - Maintenance	57
• Viewing 3D	58
• 3D Mode Selection	59
• 3D Settings	60
• Source image format	62
Tuning and editing channels	
• Setting menu	63
• Favourites Edit	63
• Channel List	64
• Auto Tuning	65
• Manual Tuning	66
• Update Channel List	67
• New Channel Message	67
• Signal Condition	67
• Add TV Signal	67

Recording

USB HDD setup

- Preparations 68
- Setting for USB HDD 69

Recording current programme

- One Touch Recording 71
- REW LIVE TV 72

Timer Programming

- Setting Timer Programming 74
- Editing Timer Programming 76
- Remote recording 77
- Note 77

Technical information

- USB HDD 79

Media Player

Using Media Player

- Information 80
- Selecting device / mode 82
- Network device 84

Photo mode

- Selecting file 85
- Viewing photo 86
- Sorting photos 86
- Multi Shot 3D 87
- Using Slideshow 88

Video mode

- Selecting file 92
- Watching video 93
- Video Setup 94
- Audio output settings 95

Recorded TV mode	
• Selecting content	96
• Watching recorded TV	97
• Grouping contents	98
• Deleting content	98
• Changing device	99
• Chapter List	99
• Audio output settings	100
Music mode	
• Selecting file	101
• Playing music	101
• Music Setup	102
USB Sharing	
• USB Sharing	103
Technical information	
• Device handling caution	105
• SD Card	105
• USB devices	106
• Photo format	106
• Video format	107
• Music format	110
Network	
Internet content	
• Information	111
• Selecting internet content	111
• Note	112
DLNA	
• Information	113
• Using DLNA	116
Network connections	
• Internet connection	117
• DLNA connection	118

• Note	120

Network settings	
• Network Connection	121
• Custom - Wireless	122
• Custom - Wired	124
• Custom - Wireless Access Point	126
• Network Status	127
• my Home Cloud Settings	127
• VIERA Name	127
• TV Remote App Settings	128
• Network Link Settings	129
• TV Anytime Settings	130
• File Sharing Settings	131
• Software Update	131
• New Software Message	131

Photos	
• Selecting file	132
• Viewing photo	133
• Using Slideshow	133

Videos	
• Selecting file	135
• Watching video	135
• Video Setup	137
• Audio output settings	138

Music	
• Selecting file	139
• Playing music	139
• Music Setup	140

DIGA Recorder	
• Controlling DIGA Recorder	141

Technical information	
• Photo format	142
• Video format	142

• Music format	145
----------------	-----

Functions

User profile

• Information	146
• Settings	146
• my Stream	147

Voice Control

• Preparations	149
• How to use	150

Touch Pad Controller

• Information	151
• My button	151
• Settings	152

VIERA Link “HDAVI Control™”

• Summary of VIERA Link	153
• Preparations	157
• Easy playback	157
• Power on Link	158
• Power off Link	158
• Standby Power Save	158
• Intelligent Auto Standby	158
• VIERA Link Control	159
• Speaker Selection	160
• Note	161

Child Lock

• Using Child Lock	162
• PIN number	162
• Parental Rating	163

Data Service Application

• Using Data Service Application	164
• Cookie	164
• Note	165

Shipping Condition	
• Shipping Condition	166
Updating the TV Software	
• Information	167
• Auto update	167
• Manual update	168
Setting characters	
• Using Numeric buttons	169
Bluetooth devices	
• Bluetooth Setup	170
Keyboard	
• Keyboard	172
Settings	
Setting menu	
• How to use	173
Picture	
• Viewing Mode	175
• Basic settings	175
• Ambient Sensor	176
• Noise reduction settings	176
• Advanced Settings	176
• Option Settings	177
• Screen Settings	178
• 3D Settings	179
• Copy Adjustment	180
• Reset Picture Defaults	180
Sound	
• Mode	181
• Basic settings	181
• Volume settings	182
• Voice Guidance Settings	182
• Audio Description	183

• Advanced settings	184
• Reset Sound Defaults	184

Network

• Network Connection	185
• Network Status	185
• my Home Cloud Settings	185
• VIERA Name	185
• TV Remote App Settings	185
• Network Link Settings	185
• TV Anytime Settings	185
• File Sharing Settings	185
• Other settings	186

Timer

• Off Timer	187
• Timer Programming	187
• Clock Settings	187
• Auto Standby	188
• No signal Power off	188

Setup

• Eco Navigation	189
• Voice Control Settings	189
• User Settings	189
• USB Device Setup	189
• Recording Setup	189
• VIERA Touch Pad Controller	189
• Bluetooth Setup	190
• Child Lock	190
• Tuning Menu	190
• Display Settings	191
• VIERA Link Settings	192
• Data Service Application	193
• System Menu	194
• Other Settings	194

Support

FAQs

• Picture	195
• Digital TV	197
• Sound	199
• 3D	199
• HDMI	200
• Network	201
• Other	202

Maintenance

• Care and Cleaning	204
---------------------	-----

Information

• Using Help menu	205
-------------------	-----

Optional accessories

• 3D Eyewear	206
• Communication Camera	206
• Wall-hanging bracket	207

Licence

• Licence	208
-----------	-----

 Letters enclosed in a box indicate remote control buttons.

 Letters in cyan indicate on-screen display items.

 References in this eHELP

- The images shown in this eHELP are for illustrative purposes only.


my Home Screen

my Home Screen

Information

“my Home Screen” is a gateway to the TV, applications, and more.

It provides easy access to special features such as Media Player, videos, games, communication tools, etc. as shown below (example).

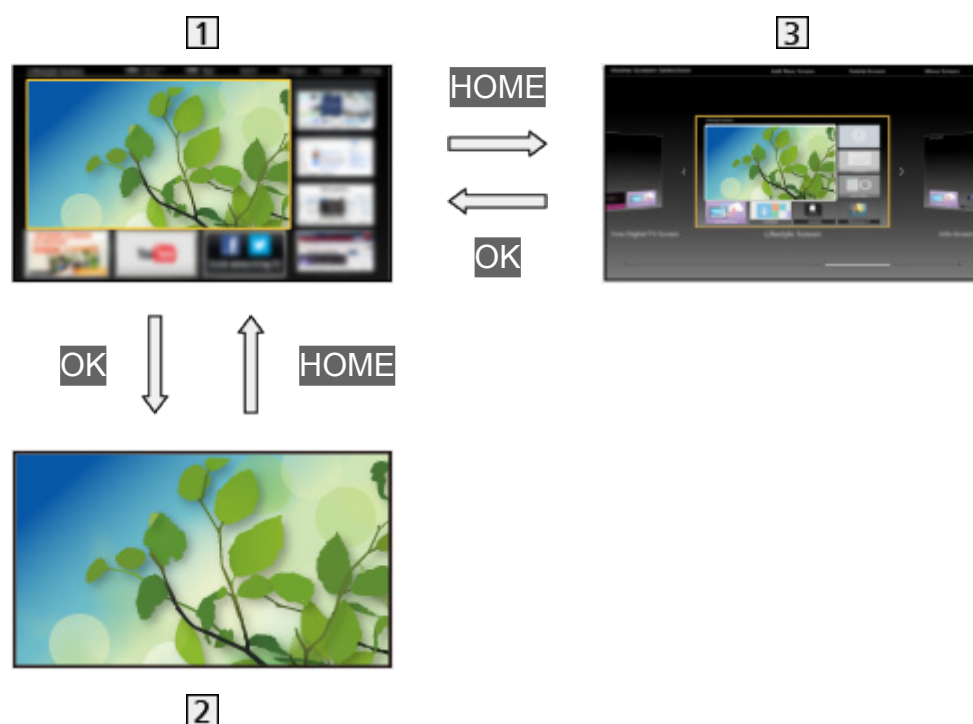

1 Home Screen

2 Selected content screen (TV, application, etc.)

3 Home Screen Selection

- Your preferred Home Screen can be selected.

How to use

Home Screen provides access to special features such as Media Player, TV, internet content, data services, communication tools, etc.

1. Display Home Screen with **HOME**.

(Example)



- The last viewed Home Screen is displayed when the TV is turned on.
- Press again to select or add your preferred Home Screen layout.

 → my Home Screen > my Home Screen > Settings

2. Select a feature with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.

- To watch full-screen TV

- 1) Select the TV viewer with $\triangle / \nabla / \triangleleft / \triangleright$.

(Example)



- 2) Press **OK** to watch.

(Example)



- Also refer to [Tutorial](#) from the tool guide.

Settings

Select the setup menu from the tool guide on the top of the screen.

(Example)



■ Home Screen Selection

1. Display [Home Screen Selection](#) with **HOME**.

(Example)



2. Select the screen with \triangleleft / \triangleright and press **OK** to set.

[Full Screen TV](#):

Displays full-screen TV.

[TV Home Screen](#):

To make your TV experience more convenient and comfortable

[Lifestyle Screen](#):

Displays the TV with useful information and services for everyday life.

[Info Screen](#):

Enjoy internet content while watching TV.

■ Face Recognition / Voice Print Recognition

By using the Communication Camera and Voice Control function, this TV recognises your face / voice and displays the registered Home Screen.

- Say “my Home Screen” into the microphone of the Touch Pad Controller to use this function.
- To use this function, you need to set up a user profile and register face / voice data, preferred Home Screen, etc.

 → [Functions](#) > [User profile](#) > [Settings](#)

- Communication Camera is not included. Please purchase as necessary.

 → [Support > Optional accessories](#)

- For details of Voice Control function

 → [Functions > Voice Control](#)

■ Settings

You can customise any Home Screen. (For example, changing the wallpaper, renaming freely, editing applications, setting the screen launched when the TV is turned on, etc.)

1. Select [Settings](#) from the tool guide.
2. Follow the on-screen instructions.

■ Search

You can search the content from various features.

1. Select [Search](#) from the tool guide.
2. Follow the on-screen instructions.

= Note =

- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [my Home Screen > my Home Screen > OSD Colour](#)

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → [Network > Network connections](#)

 → [Network > Network settings](#)

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use my Home Screen. You can update the software later manually.

 → [Network > Network settings > Software Update](#)

OSD Colour

1. Display the menu with **MENU**.
 2. Select **Setup > Display Settings > OSD Colour** with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

OSD Colour

(Jet black / Pale grey / Organic brown / Sand beige)

Selects the preferred colour type of on-screen displays.

- This function is available for the information banner, menu screen, Home Screen, etc.


APPS List

Information

Various applications (internet contents, network contents, Media Player, etc.) can be accessed easily from APPS List.

■ APPS List

(Example)

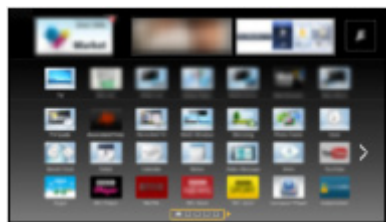

= Note =


- APPS List is subject to change without notice.

How to use

You can access special features such as internet contents, network contents, Media Player, etc. from APPS List.

1. Display APPS List with **APPS**.

(Example)

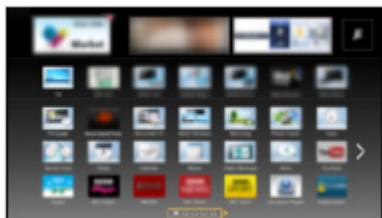

- To exit APPS List

EXIT

2. Select an icon of the features with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.

Internet contents

 → Network > Internet content

my Stream

- Provides recommended contents (TV programme, internet content, etc.).
- You need a broadband network environment to use this function fully.
- Follow the on-screen instructions to operate the application.

 → Functions > User profile > my Stream

Media Player

 → Media Player > Using Media Player > Selecting device / mode

Recorded TV

 → Media Player > Recorded TV mode

Media Server

 → Network > DLNA > Using DLNA

VIERA Link

 → Functions > VIERA Link "HDAVI Control™"

Settings

You can customise APPS List (screen settings, etc.).

1. Display APPS List with **APPS**.
2. Select the icon for settings on APPS List with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.



3. Follow the on-screen instructions.

= Note =

- Setup menu items may be changed without notice.


Watching

Basic

Basic connection

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

■ Aerial

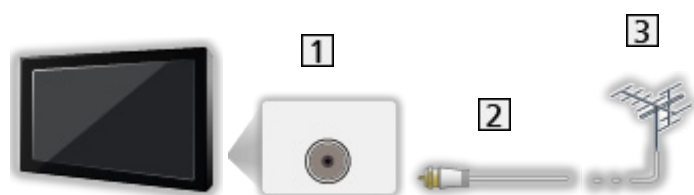


1 Aerial terminal

2 RF cable

3 Aerial

- Keep RF (antenna) cable away from the mains lead to avoid and minimise mains interference pickup.
- Do not place the RF cable under the TV.
- An aerial, correct cable (75 Ω coaxial) and correct terminating plug are required to obtain optimum quality picture and sound.
- If a communal aerial system is used, you may require the correct connection cable and plug between the wall aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct aerial system for your particular area and the accessories required.
- Any matters regarding aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.

■ DVD Recorder / VCR

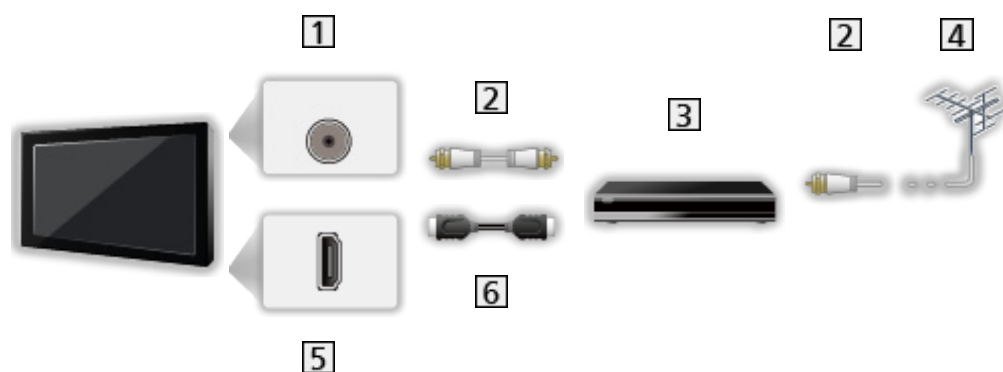


- 1 Aerial terminal
- 2 RF cable
- 3 DVD Recorder / VCR
- 4 Aerial
- 5 HDMI terminal
- 6 HDMI cable

■ Set top box



- 1 HDMI terminal
- 2 HDMI cable
- 3 Set top box
- 4 Satellite dish

= Note =

- For VIERA Link connections
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- External equipment and cables shown are not supplied with this TV.
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.
- Use a fully wired HDMI compliant cable.
- Check the terminal type and cable plugs are correct when connecting.

Selecting channel

1. Select Digital TV or Analogue TV with **TV**.
 - The selected mode is displayed on the top left of the screen.
2. Select a channel with **Channel Up / Down** or **Numeric buttons**.



- Press **Numeric buttons** to select a channel position with 2 or more-digit (e.g. 399, press **3** **9** **9**).

■ To select a channel from the channel list

1. Display the channel list with **OK**.
2. Select a channel from the list with Δ / ∇ and press **OK** to watch.

■ To select a channel using information banner

1. Display information banner with **INFO** if it is not displayed.
2. Select a channel with Δ / ∇ and press **OK** to watch while the banner is displayed.

 → Watching > Basic > Information banner

■ To select a channel using TV Guide

1. Display **TV Guide** with **GUIDE**.
2. Select the current programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **View** with Δ / ∇ and press **OK** to watch. (Digital TV)


 → Watching > TV Guide > Using TV Guide

Information banner

Display information banner with **INFO**.

- Also appears when changing a channel.

(Example)

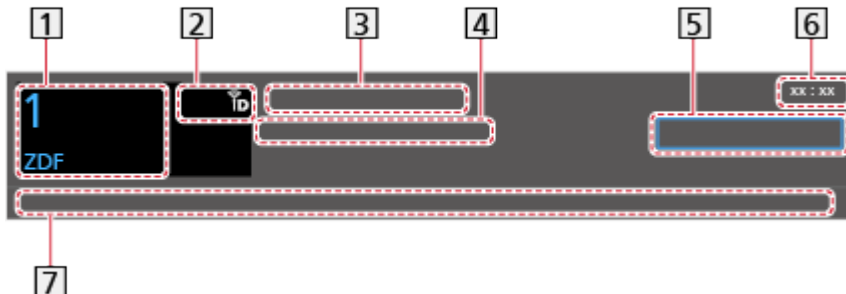

- 1 Channel position and name
- 2 Channel type (Radio, etc.) / Encrypted channel (🔒) / TV mode (📺, 📻)
- 3 Programme
- 4 Start time / End time (Digital TV)
Channel position, etc. (Analogue TV)
- 5 Category
- 6 Current time
- 7 Features available / message meanings

Rating:

Rating information

📺 → Functions > Child Lock > Parental Rating

Bad signal:

Poor quality TV signal

AD:

Audio Description service available

- This function can aid visually-impaired viewers by adding an additional audio track to describe events on screen.

📺 → Watching > For best audio > Audio Description

📺 :

Subtitle service available

📺 :

Multiple image or audio available

∞, I, II, ▽ :

Audio mode

 → [Watching > For best audio > Advanced settings](#)

D :

Data service (Hybrid Broadcast Broadband TV application) available

 → [Functions > Data Service Application > Using Data Service Application](#)

1 – 90:

Off Timer remaining time

 → [Watching > Basic > Off Timer](#)

- To confirm another tuned channel

△ / ▽

- To watch the channel listed in the banner

OK

- Information on the next programme (Digital TV)

▷

- Extra information (Digital TV)

INFO

– Press again to hide the banner.

- To hide the banner

EXIT

- To update the TV software (if available)

 (red)

- To select a favourite list (Digital TV)

 (blue)

– If the favourite list is created in [Favourites Edit](#).

 → [Watching > Tuning and editing channels > Favourites Edit](#)

- To adjust banner timeout, set [Banner Display Timeout](#).

1) Display the menu with **MENU**.

2) Select [Setup > Display Settings > Banner Display Timeout](#) with △ / ▽ and press **OK** to access.

3) Set with △ / ▽ and press **OK** to store.

- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [my Home Screen > my Home Screen > OSD Colour](#)

- To display the introduction banner for the internet service
 - 1) Display the menu with **MENU**.
 - 2) Select **Setup > Display Settings > Smart Banner** with Δ / ∇ and press **OK** to access.
 - 3) Select **On / Off** with Δ / ∇ and press **OK** to set.

Option Menu

Confirm or change the current status.

1. Display the option menu with **OPTION**.
 2. Select one of the following items with Δ / ∇ and press **OK** to access.
Voice Guidance Settings / Audio Description / Audio Selection / AD / Dual Audio / MPX / Volume Correction
 - The function items vary depending on the TV mode.
 3. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Voice Guidance Settings

Guidance settings for visually impaired users

 → **Watching > For best audio > Voice Guidance Settings**

Audio Description

Set to **Auto** if the programme has Audio Description service, then you will hear an additional audio track to describe events on screen (if available).

- For Digital TV
- To adjust the volume for Audio Description

 → **Watching > For best audio > Audio Description**

Audio Selection / AD

Selects between alternative language or Audio Description for sound tracks (if available).

- This setting is not memorised and it will return to the default setting once you exit the current programme.
 - For Digital TV
-

Dual Audio

Selects stereo / monaural (if available).

- For Digital TV
-

MPX

Selects multiplex sound mode (if available).

 → Watching > For best audio > Advanced settings

- For Analogue TV
-

Volume Correction

Adjusts the volume of each individual channel or input mode.

Subtitle

Display / hide subtitles (if available).

1. Display the subtitle menu with **STTL/AD**.
 2. Select **Subtitle** with Δ / ∇ and press **OK** to access.
 3. Select **On** / **Off** with Δ / ∇ and press **OK** to store.
- For Digital TV

= Note =

- Subtitles may not be displayed properly in 3D images.

Last view

Switch to a previously viewed channel or input mode easily with **LAST VIEW**.

- Press again to return to the current view.

= Note =

- Switching channel may not be available depending on the condition.
- Watching less than 10 seconds is not reflected in the previously viewed channel or input mode.

Off Timer

Turn the TV Standby mode automatically after a fixed period.

1. Display the menu with **MENU**.
2. Select **Timer** > **Off Timer** with Δ / ∇ and press **OK** to access.
3. Select the time in 15-minute increments with Δ / ∇ and press **OK** to set.
90 / 75 / 60 / 45 / 30 / 15 / Off (minutes)

- To cancel, set to **Off** or turn the TV off.
- The remaining time displays on the information banner.


 → Watching > Basic > Information banner

- When the remaining time is less than 3 minutes, the remaining time will flash on the screen.

Energy saving functions

The TV can be eco-friendly using energy-saving functions.

The TV will automatically go into Standby mode in the following conditions:

- **Eco Navigation** is set to **Set to Eco**.
- **Off Timer** is active.
 → **Watching > Basic > Off Timer**
- No operation is performed for 4 hours while **Auto Standby** is set to **On**.
- No signal is received and no operation is performed for 10 minutes while **No signal Power off** is set to **On**.

= Note =

- This function does not affect the recording.

■ Auto Standby

1. Display the menu with **MENU**.
 2. Select **Timer > Auto Standby** with **△ / ▽** and press **OK** to access.
 3. Select **On / Off** with **△ / ▽** and press **OK** to set.
-

Auto Standby

(On / Off)

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

- Automatic input switching with the connected equipment affects this function and time-count will be reset.
- The notification message will appear 3 minutes before going into Standby mode.

■ No signal Power off

1. Display the menu with **MENU**.
 2. Select **Timer > No signal Power off** with **△ / ▽** and press **OK** to access.
 3. Select **On / Off** with **△ / ▽** and press **OK** to set.
-

No signal Power off

(On / Off)

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

- The notification message will appear 3 minutes before going into Standby mode.

■ Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

The concerned items and their current settings are displayed. Select [Set to Eco](#) to set them to the energy-saving settings at once.

1. Display the menu with **MENU**.
2. Select [Setup](#) > [Eco Navigation](#) with Δ / ∇ and press **OK** to access.
3. Select [Set to Eco](#) with \triangleleft / \triangleright and press **OK** to set.
 - [Auto Standby](#) and [No signal Power off](#) are active when [Eco Navigation](#) is set to [Set to Eco](#).

Adjusting time

Settings for the system time of this TV.

1. Display the menu with **MENU**.
 2. Select [Timer](#) > [Clock Settings](#) with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to set.
[Mode](#) / [Date](#) / [Time](#) / [Daylight Saving Time](#) / [Region Select](#)
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Mode

([Auto](#) / [Manual](#))

Selects the clock setting mode for this TV.

- Set to [Auto](#) to adjust the time automatically using the time information from the digital broadcast. Set to [Manual](#) to adjust manually.
-

Date

Sets the current date manually.

Time

Sets the current time manually.

Daylight Saving Time

Selects time offset from the standard time for Summer Time. (Base on GMT)

([Auto](#) / [Off](#) / [+ 1/2 hour](#) / [+ 1 hour](#))

- If there is a gap between displayed time and actual time, set this function.

- Normally select [Auto](#) to adjust as following for the region has been set in [Region Select](#).

[NSW / ACT / Victoria / Tasmania](#): +11:00

[South Australia](#): +10:30

[Queensland](#): +10:00

[Northern Territory](#): +9:30

[Western Australia](#): +8:00

[Region Select](#)

Selects the region where you live to adjust the standard time. (Base on GMT)

([NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania](#))

- The time contained in the broadcast signal is UTC (Universal Time coordinated) formally known as GMT (Greenwich Mean Time).

[NSW / ACT / Victoria / Queensland / Tasmania](#): +10:00

[South Australia / Northern Territory](#): +9:30

[Western Australia](#): +8:00

External equipment

External connection

These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment.

- For basic connection


 → [Watching > Basic > Basic connection](#)

- To use the specific devices supporting Bluetooth wireless technology

 → [Functions > Bluetooth devices](#)

- Check the terminal type and cable plugs are correct when connecting.

■ HDMI equipment

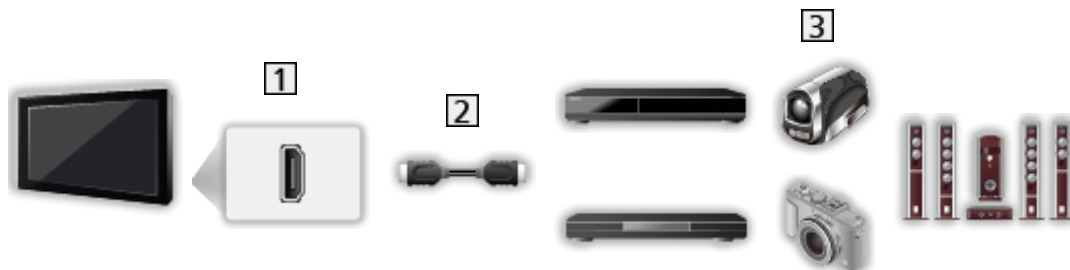

1 HDMI terminal

2 HDMI cable

3 Recorder / Player / 3D compatible player / Set top box / Camcorder /
Amplifier with speaker system

= Note =


- Use a fully wired HDMI compliant cable.

- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

■ AV devices

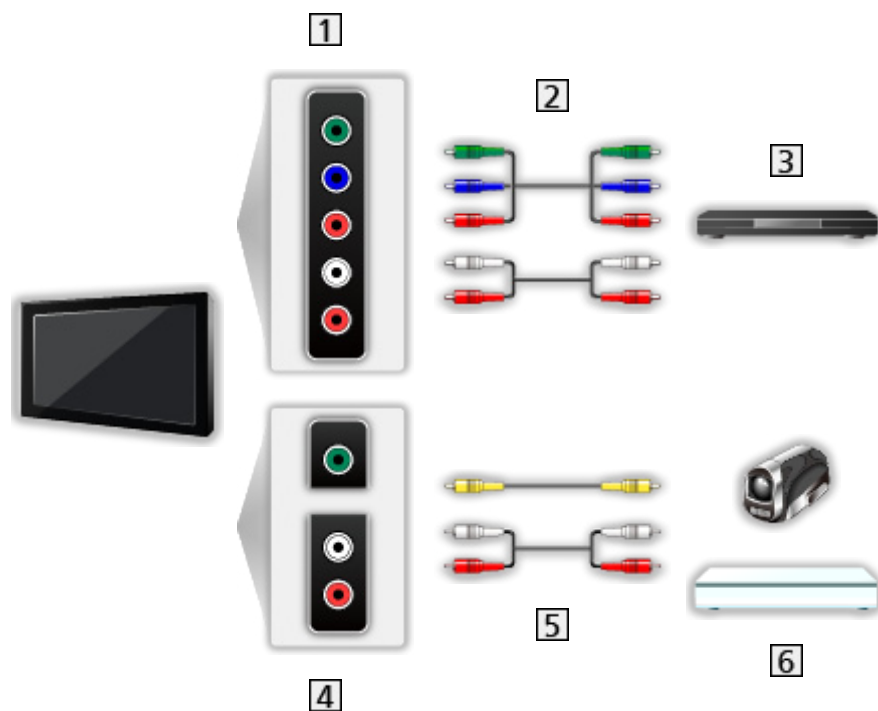

1 AV IN (COMPONENT) terminals

2 Component cables


3 DVD Player

4 AV IN (VIDEO) terminals

5 Composite cables

6 Camcorder / Game equipment

■ USB devices

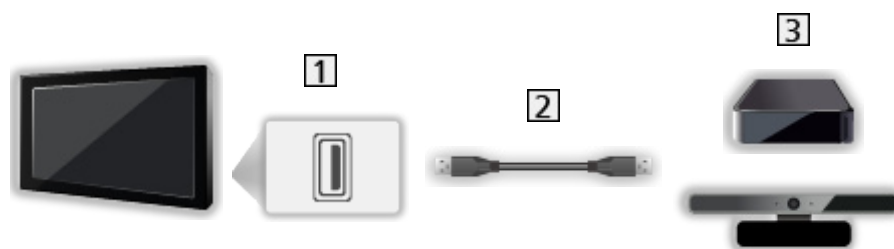

- 1 USB port
- 2 USB cable
- 3 USB HDD / Communication Camera

= Note =

- It is recommended to connect the device to the TV's USB port directly.
- You cannot use two or more of the same kind of USB devices simultaneously except USB Flash Memory or USB HDD.
- Use USB 2 port for connecting the USB HDD.
- You cannot use two or more of the same kind of USB devices simultaneously except USB Flash Memory.
- Use USB 1 port for connecting the Communication Camera.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- Additional information for the devices may be on the following website.
<http://panasonic.net/viera/support> (English only)

■ To listen with speakers



- 1 DIGITAL AUDIO OUT
- 2 Optical digital audio cable
- 3 Amplifier with speaker system

- To enjoy multi-channel sound from external equipment (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.
- To select the sound output, set **TV Speaker**.

 → **Watching > For best audio > Volume settings**

Watching external input

Connect the external equipment (VCR, DVD, etc.) and you can watch through the input.

1. Display the input selection menu with **AV**.
2. Select the input mode connected to the equipment with Δ / ∇ and press **OK** to watch. (The selected mode is displayed on the top left of the screen.)
 - You can also select the input pressing **AV**. Press repeatedly until the desired input is selected.
 - To switch between **COMPONENT** and **VIDEO** in **AV**, select with $\triangleleft / \triangleright$.
 - You can label or skip each input mode. Skipped inputs will not be displayed when **AV** is pressed. ([Input Labels](#))
 - The remote control is capable of operating the contents or external equipment.

 → [Watching > External equipment > Operating with TV's remote control](#)

- To return to TV mode



= Note =

- If the external equipment has an aspect adjustment function, set it to [16:9](#).
- For details, read the manual of the equipment or ask your local dealer.

■ Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#) or banner.

 → [Watching > Basic > Information banner](#)

1. Display the menu with **MENU**.
2. Select [Setup > Display Settings > Input Labels](#) with Δ / ∇ and press **OK** to access.
3. Set with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to set.
 - To name each input mode freely, select [User input](#) and set characters (maximum 10 characters).
 - To skip the input mode, select [Skip](#).

■ Playing Time Display

Set to **On** to display a time period of continuous use in Game mode on the top right of the screen every 30 minutes.

1. Display the menu with **MENU**.
2. Select **Setup > Display Settings > Playing Time Display** with Δ / ∇ and press **OK** to access.
3. Select **On / Off** with Δ / ∇ and press **OK** to set.
 - This function is available when **Game Mode** is set to **On**.

Operating with TV's remote control

You can operate the contents in Media Player / media server, recording functions or the connected equipment with the below buttons of this TV's remote control.



Playback (VCR / DVD / video content)



Stop the operations



Rewind, view the picture rapidly in reverse (VCR)

Skip to the previous track, title or chapter (DVD / video content)



Rewind, view the picture rapidly in reverse (VCR)

Search backward (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Skip to the next track, title or chapter (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Search forward (DVD / video content)



Pause / Resume

Press and hold to play at slow speed (DVD)



One Touch Recording

 → **Recording > Recording current programme > One Touch Recording**

■ How to change the code

Each Panasonic product has its own remote control code. Change the code according to the product for operation.

1. Press and hold Standby On / Off switch during the following operations.



2. Enter the appropriate code as follows with **Numeric buttons**.



- Codes for each product and features

70: DVD Recorder, DVD Player, Blu-ray Disc Player

71: Player theatre, Blu-ray Disc theatre

72: VCR

73 (default):

Using in USB HDD recording, Media Player, DLNA features or VIERA Link

3. Press  to change.

= Note =

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to defaults if batteries are replaced.
- Some operations may not be available depending on the equipment.

HDMI features

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.



HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment* with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using a fully wired HDMI compliant cable.

 → [Watching > External equipment > External connection](#)

*: The HDMI logo is displayed on HDMI-compliant equipment.

■ Applicable HDMI features


- Input audio signal:
2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)
- Input video signal:
Matches the output setting of the digital equipment.
 → [Watching > External equipment > Valid input signals](#)
- VIERA Link (HDAVI Control 5)
 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Content Type
- Audio Return Channel
 - Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.
 - For HDMI2 terminal
- 3D

■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When using the DVI to HDMI adaptor cable, connect the audio cable to the audio input terminal (use AV IN audio terminals).

- Enquire HDMI adaptor cable at your local digital equipment retailer shop.

= Note =

- Audio settings can be made on [HDMI Input](#) in the Sound Menu.
 → [Watching > For best audio > Advanced settings](#)
- If the connected equipment has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

Valid input signals

■ COMPONENT, HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1 125 (1 080) / 60i, 50i	○	○
1 125 (1 080) / 60p, 50p, 24p		○

○: Applicable input signal

= Note =

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

For best picture

Viewing Mode

1. Display the menu with **MENU**.
 2. Select **Picture > Viewing Mode** with \triangle / ∇ and press **OK** to access.
 3. Select the mode with \triangle / ∇ and press **OK** to set.
-

Viewing Mode

(**Dynamic** / **Normal** / **Cinema** / **True Cinema** / **Custom**)

Selects your favourite picture mode for each input.

Dynamic:

Improves contrast and sharpness for viewing in a bright room.

Normal:

Normal use for viewing in a normal lighting condition.

Cinema:

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

True Cinema:

Reproduces the original image quality precisely without any revision.

Custom:

Adjusts each menu item manually to suit your favourite picture quality.

In each Viewing Mode, **Backlight**, **Contrast**, **Brightness**, **Colour**, **Tint**, **Sharpness**, **Colour Temperature**, **Vivid Colour**, **Adaptive Backlight Control**, **Ambient Sensor**, **Noise Reduction**, **MPEG Remaster**, **Intelligent Frame Creation** and **24p Smooth Film** can be adjusted and stored.

When in **Cinema**, **True Cinema** or **Custom**, **Advanced Settings** can be adjusted additionally. The settings in **True Cinema** or **Custom** can be stored for each input.

- You can set **Viewing Mode** in 2D and 3D mode for each.

Ambient Sensor

1. Display the menu with **MENU**.
 2. Select **Picture > Ambient Sensor** with Δ / ∇ and press **OK** to access.
 3. Select **On / Off** with Δ / ∇ and press **OK** to set.
-

Ambient Sensor

(On / Off)

- Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

Aspect

Change the aspect ratio (image size) with **ASPECT**.

■ To change the aspect ratio manually

1. Display **Aspect Selection** with **ASPECT**.
2. Select the mode with Δ / ∇ and press **OK** to set.
 - You can also change the mode pressing **ASPECT**.
(Press repeatedly until you reach the desired mode.)

16:9:

Directly displays the image at 16:9 without distortion (anamorphic).

14:9:

Displays the image at the standard 14:9 without distortion.

Just:

Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

4:3:

Displays the image at the standard 4:3 without distortion.

Zoom:

Displays a 16:9 letterbox or 4:3 image without distortion.

4:3 Full:

Displays a 4:3 image enlarged horizontally to fit the screen.

- For HD (High definition) signals

Sidecut Just:

Displays a 16:9 letterbox (anamorphic) image full-screen. Stretching is only noticeable at the left and right edges.

- For HD (High definition) signals

Sidecut Zoom:

Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

- For HD (High definition) signals

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.
- Aspect cannot be changed in 3D format signals.

Basic settings

1. Display the menu with **MENU**.
 2. Select **Picture** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Backlight / Contrast / Brightness / Colour / Tint / Sharpness / Colour Temperature / Vivid Colour / Adaptive Backlight Control / Intelligent Frame Creation / 24p Smooth Film
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Backlight, Contrast, Brightness, Colour, Tint, Sharpness

Adjusts the levels of these options according to your personal preference.

Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

Vivid Colour

(On / Off)

Automatically adjusts colours to vivid ones.

Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

Intelligent Frame Creation

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

- Depending on the contents, images may be noisy. To prevent the noise, change the setting.
 - Not valid for photo contents of Media Player / Network services or when **Game Mode** is set to **On**
-

24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

- This function is available only for 24p signal input and displayed instead of **Intelligent Frame Creation**.
- Not valid for photo contents of Media Player / Network services or when **Game Mode** is set to **On**

Noise reduction settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Noise Reduction** / **MPEG Remaster** with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

Advanced Settings

You can adjust and set up the detailed picture settings when **Viewing Mode** is set to **Cinema**, **True Cinema** or **Custom**. The settings in **True Cinema** or **Custom** can be stored for each input.

 → **Watching > For best picture > Viewing Mode**

1. Select the input mode with **AV** or **TV**.
2. Display the menu with **MENU**.
3. Select **Picture > Viewing Mode** with Δ / ∇ and press **OK** to access.
4. Select the mode with Δ / ∇ and press **OK** to set.

Cinema / True Cinema / Custom

■ Adjust the detailed picture settings

1. Display the menu with **MENU**.
2. Select **Picture > Advanced Settings** with Δ / ∇ and press **OK** to access.
3. Select one of the following items with Δ / ∇ and press **OK** to access.

Contrast Control / White Balance / Colour Management / Gamma / Reset Picture Defaults

4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.

■ Contrast Control

Contrast Control

(Auto / Custom / Off)

Automatically adjusts the detailed contrast settings. Select **Custom** to set **Contrast Control Setting** manually.

Contrast Control Setting

Adaptive Gamma Control:

Adjusts the gamma curve to make the image brighter.

Black Expander:

Gradually adjusts the shades of black.

Clear White Effect:

Makes the white area clearer.

Reset Contrast Control:

Resets items of **Contrast Control Setting**.

■ White Balance

R-Gain / G-Gain / B-Gain

Adjusts the white balance of bright red / green / blue areas.

R-Cutoff / G-Cutoff / B-Cutoff

Adjusts the white balance of dark red / green / blue areas.

More Detailed Adjustment

Adjusts more detailed items of [White Balance](#).

Input Signal Level:

Adjusts the input signal level.

R-Gain / G-Gain / B-Gain:

Adjusts the detailed white balance of bright red / green / blue areas.

Reset White Balance:

Resets items of [More Detailed Adjustment](#).

Reset White Balance

Resets [White Balance](#) to the default settings.

■ Colour Management

R-Hue / R-Saturation / R-Luminance

Adjusts the picture hue / saturation / luminance of red areas.

G-Hue / G-Saturation / G-Luminance

Adjusts the picture hue / saturation / luminance of green areas.

B-Hue / B-Saturation / B-Luminance

Adjusts the picture hue / saturation / luminance of blue areas.

More Detailed Adjustment

Adjusts more detailed items of [Colour Management](#).

Y-Hue / C-Hue / M-Hue:

Adjusts the picture hue of yellow / cyan / magenta areas.

[Y-Saturation / C-Saturation / M-Saturation:](#)

Adjusts the saturation of yellow / cyan / magenta areas.

[Y-Luminance / C-Luminance / M-Luminance:](#)

Adjusts the luminance of yellow / cyan / magenta areas.

[Reset Colour Management:](#)

Resets items of [More Detailed Adjustment](#).

[Reset Colour Management](#)

Resets [Colour Management](#) to the default settings.

■ Gamma

[Gamma](#)

Switches the gamma curve.

- Please note the numerical values are reference for the adjustment.
-

[More Detailed Adjustment](#)

Adjusts more detailed items of [Gamma](#).

[Input Signal Level:](#)

Adjusts the input signal level.

[Gain:](#)

Adjusts the gain of gamma for selected signal level.

[Reset Gamma:](#)

Reset items of [More Detailed Adjustment](#).

[Reset Gamma](#)

Reset [Gamma](#) to the default settings.

■ Reset Picture Defaults

[Reset Picture Defaults](#)

Resets [Advanced Settings](#) to the default settings.

Option Settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Option Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Game Mode / **Film Cadence Mode** / **1080p Pure Direct** / **HDMI Content Type** / **HDMI RGB Range** / **3D-COMB**
 4. Set with Δ / ∇ and press **OK** to store.
-

Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

- Not valid in TV mode
 - To display a continuous record of time spent using Game mode, set **Playing Time Display**.
-

Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

- This function is available for interlaced signals (except in Network services or when **Game Mode** is set to **On**).
-

1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

- Not valid in 3D mode

HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

Auto:

Automatically adjusts the picture settings according to the received HDMI content if the connected equipment supports HDMI Content Type.

- To set the availability of each content type for Auto mode, select **Auto Detail Setting**.
 - For HDMI input
-

HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

- When the black level is not suitable, select **Full**.
 - For HDMI input
-

3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

- Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to **On** to display sharper and more accurate colours.
- For PAL / NTSC signal reception in TV mode or from composite connection

Screen Settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Screen Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
16:9 Overscan / **H-Size** / **Zoom Adjustments** / **Screen Display**
 4. Set with Δ / ∇ and press **OK** to store.
-

16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

On:

Enlarges the image to hide the edge of the image.

Off:

Displays the image in the original size.

- Set to **On** if noise occurs on the edge of the screen.
 - This function can be memorised for SD (Standard definition) and HD (High definition) signals respectively.
 - Not valid in Network services
-

H-Size

(H-Size1 / H-Size2)

Switches the horizontal display range to reduce noise on the side edge of the image.

- For TV mode, AV and HDMI input
 - Not valid in 3D mode
-

Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Just](#), [Sidecut Just](#), [Zoom](#) or [Sidecut Zoom](#).

Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

- This function is effective in reducing power consumption when listening to the sound without watching the TV screen.
- Press any buttons (except Standby On / Off switch) to turn the screen on.

Copy Adjustment

Copies the picture settings of [True Cinema](#) or [Custom](#) to those of another input or another Viewing Mode.

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Copy Adjustment](#) > [Destination Viewing Mode](#) / [Destination Input](#) with Δ / ∇ and press **OK** to access.
3. Select the destination to copy to with Δ / ∇ and press **OK** to set.
4. Select [Copy Start](#) with Δ / ∇ and press **OK** to copy.
5. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.

= Note =

- [Option Settings](#), [Screen Settings](#) and [3D Settings](#) will not be copied.

For best audio

Sound mode

1. Display the menu with **MENU**.
 2. Select **Sound** > **Mode** with Δ / ∇ and press **OK** to access.
 3. Select the mode with Δ / ∇ and press **OK** to set.
-

Mode

(**Standard** / **Music** / **Ambience** / **User**)

Selects your favourite sound mode for each input.

Standard:

Provides the suitable sound quality for all types of scenes.

Music:

Improves sound quality for watching music videos, etc.

Ambience:

Improves spatial effects and provides clear sounds.

User:

Adjusts the sounds manually using the equaliser to suit your favourite sound quality.

- In each mode, **Bass**, **Treble**, **Surround** and **Bass Boost** can be adjusted and stored.
- For the User mode, **Equaliser** will be available in the Sound Menu instead of **Bass** and **Treble**. Select **Equaliser** and adjust the frequency.

 → **Watching** > **For best audio** > **Basic settings**

- This function is effective only for the sound from TV speakers.

Basic settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Bass / **Treble** / **Equaliser** / **Balance** / **Surround** / **Bass Boost**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Bass

Adjusts level to enhance or minimise lower, deeper sound output.

Treble

Adjusts level to enhance or minimise sharper, higher sound output.

Equaliser

Adjusts the frequency level to suit your favourite sound quality.

- This function is available when **Mode** is set to **User**.
 - Select the frequency and change the frequency level using Δ / ∇ .
 - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
 - To reset the levels of each frequency to the default settings, select **Reset Equaliser Settings** with \triangleleft / \triangleright and press **OK**.
 - This function is effective only for the sound from TV speakers.
-

Balance

Adjusts volume level of right and left speakers.

Surround

(Virtual Surround / Off)

Selects surround sound settings.

Virtual Surround:

Provides a dynamic enhancer of width and depth to simulate improved spatial effects.

- This function is effective only for the sound from TV speakers.
-

Bass Boost

(On / Off)

Enhances the effect of bass sounds.

- This function is effective only for the sound from TV speakers.

Volume settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
TV Speaker / **Auto Gain Control** / **Volume Correction** / **Speaker Distance to Wall**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

TV Speaker

(On / Off)

Set to **Off** when using the external speakers.

Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

Volume Correction

Adjusts the volume of each individual channel or input mode.

Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

- If the back space between the TV and wall is within 30 cm, **Up to 30cm** is recommended.
- If the back space between the TV and wall is over 30 cm, **Over 30cm** is recommended.
- This function is effective only for the sound from TV speakers.

Voice Guidance Settings

1. Display the menu with **MENU**.
 2. Select **Sound** > **Voice Guidance Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Voice Guidance / **Speed** / **Volume** / **User Level** / **Web Browser**
 4. Set with Δ / ∇ and press **OK** to store.
-

Voice Guidance

(**On** / **Off**)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

Speed

(**Fast** / **Normal** / **Slow**)

Selects the readout speed for the voice guidance.

Volume

(**Max** / **Mid** / **Min**)

Selects the volume for the voice guidance.

User Level

(**Beginner** / **Expert**)

Selects the level of verbosity for the voice guidance.

Web Browser

(**On** / **Off**)

Set to **On** to enable voice guidance of the network contents in web browser function.

Audio Description

1. Display the menu with **STTL/AD**.
 2. Select **Audio Description** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Audio Description / **Volume** / **Speakers** / **Audio Selection**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
 - You can also select this function from **Audio Description** in the Sound Menu.
-

Audio Description

(Auto / Off)

Narration settings for visually impaired users

Set to **Auto** to activate the narration sound track when available on the broadcast.

- The availability of audio description sound track is indicated by **AD** in the information banner.
 - For Digital TV
-

Volume

Adjusts the volume for Audio Description.

- For Digital TV
-

Speakers

(Mix / Standard)

Set to **Mix** to activate the description sound track from TV speakers.

- For Digital TV
-

Audio Selection

Selects between alternative languages for sound tracks (if available).

- This setting is not memorised and it will return to the default setting once you exit the current programme.
- For Digital TV

Advanced settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
MPX / Digital Audio Preference / SPDIF Selection / HDMI Input
 4. Set with Δ / ∇ and press **OK** to store.
-

MPX

Selects multiplex sound mode (if available).

Stereo:

Use this normally.

Mono:

When stereo signal cannot be received

M1 / M2:

Available while mono signal is transmitted

- For Analogue TV
-

When you receive the stereo / bilingual sound system, sound output modes can be selected by using the **MPX** in the Sound Menu.

- Meanings of mode indicators

∞ : STEREO

I : MAIN I

II : SUB II

∇ : MONO

■ Available mode indicator for each type of broadcast

- NICAM - Used in New Zealand, Singapore, Hong Kong, etc.
 - Regular broadcast (Standard Audio): No indicator / **∇**
 - Regular + NICAM MONO I (MAIN I): **I** / **∇**
 - NICAM STEREO: **∞** / **∇**
 - NICAM DUAL MONO (MAIN I / SUB II): **I** / **II** / **∇**
- A2 (German) - Used in Australia, Malaysia, etc.
 - Regular broadcast (Standard Audio): No Indicator / **∇**
 - BILINGUAL or DUAL MONO (MAIN I / SUB II): **I** / **II**
 - STEREO: **∞** / **∇**

= Note =

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended to switch from STEREO to MONO.
 - Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
 - When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position pressing the Sound Selection button.
 - DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.
-

Digital Audio Preference

(Dolby D / MPEG)

Selects the initial setting for audio tracks.

Dolby D:

The priority is given to Dolby Digital.

MPEG:

The priority is given to MPEG.

- Dolby Digital is the method of coding digital signals developed by the Dolby Laboratories. Apart from stereo (2ch) audio, these signals can also be multi-channel audio.
 - MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.
 - For Digital TV
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.



- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS for video contents of Media Player / Network services.

PCM:


Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.
 - For Digital TV or video contents of Media Player / Network services
 -  → Media Player > Video mode > Audio output settings
 -  → Network > Videos > Audio output settings
-

HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → Watching > External equipment > HDMI features

Digital:

When sound is carried via the HDMI cable connection

Analogue:

When sound is not carried via the HDMI-DVI adaptor cable connection

- For HDMI input

TV Guide

Using TV Guide

TV Guide - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcasters).

1. Select Digital TV or Analogue TV with **TV**.
2. Display **TV Guide** with **GUIDE**.
 - Press again to change the layout. (**Landscape** / **Portrait**)
 - View **Landscape** to see several channels.
 - View **Portrait** to see one channel by time.






(Example)

	11:00	11:30	12:00	12:30	1:00
1 XXXX	The Bill	The Bill	The Bill	Red Cap	Sports
7 XXXX	Hot Wars		Hobby Program		Use Junction
14 XXXX	Emmerdale	Coronation Street	The Bill		Drama
70 XXXX	10 O'Clock News		Paper Chat	Goodbye	NEWS
72 XXXX	Personage	Spring watch		Guest	
85 XXXX	Pressing	Topic	Crime		Lip

- 1 Date
- 2 Time
- 3 Programme
- 4 Channel position and name

- To watch the programme
 - 1) Select the current programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
 - 2) Select **View** with Δ / ∇ and press **OK** to watch. (Digital TV)
 - To use **Timer Programming**

 → **Watching > TV Guide > Timer Programming**


- To the previous day (Digital TV)
 -  (red)
- To the next day (Digital TV)
 -  (green)
- To view a channel list of the selected type (Digital TV)
 - 1) Display the type list with  (yellow).
 - 2) Select the type with \triangle / ∇ and press **OK** to view.
- To view a channel list of the selected favourite list
 - 1) Display the favourite list with  (blue).
 - 2) Select the favourite with \triangle / ∇ and press **OK** to view.
 - To list favourite channels, set [Favourites Edit](#).
 -  → [Watching > Tuning and editing channels > Favourites Edit](#)
- To view more details of the programme (Digital TV)
 - 1) Select the programme with \triangle / ∇ / \triangleleft / \triangleright .
 - 2) Press **INFO** to view.
 - Press again to return to [TV Guide](#).
- To exit [TV Guide](#)
 - EXIT**

= Note =



- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.
- Digital TV and Analogue TV channels are displayed on the same TV Guide screen. **D** means Digital TV channel and **A** means Analogue TV channel. There will be no programme listings for Analogue TV channels.

Timer Programming

This function allows you to select programmes that you want to be reminded to watch or record to the USB HDD.

1. Select the forthcoming programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
2. Select **USB HDD Rec. / Reminder** with Δ / ∇ and press **OK** to set.
 - To check / change / cancel a timer event
 → Recording > Timer Programming > Editing Timer Programming
 - LED will turn to orange in Standby mode if **Timer Programming** is set.
 - To return to **TV Guide**
RETURN
 - If you select the current programme, a confirmation screen asking whether you want to watch or record the programme appears. Select **Timer Programming** with Δ / ∇ and press **OK** to set **USB HDD Rec.** to record from the time you finish the timer event setting.

= Note =

- Not valid in Analogue TV
- **Timer Programming** only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- No other channels can be selected while the recording of **Timer Programming** is in progress.
- When recording programmes to the USB HDD, be sure to format the USB HDD and enable it to record in **USB Device Setup**.
 → Recording > USB HDD setup
- To set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network
 → Recording > Timer Programming > Remote recording

3D

Note

- Display the image (TV, external input, etc.) full-screen for viewing 3D.
- Do not exert pressure on or scratch the lens of the 3D Eyewear.
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- When viewing 3D images, make sure your eyes are at an approximately horizontal level and keep a position where you do not see double images.
- Do not wear the 3D Eyewear when watching something other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as sunglasses.
- 3D effects may be perceived differently depending on the person.

3D Eyewear - Maintenance

■ Storing and cleaning the 3D Eyewear

- Store the 3D Eyewear in a cool, dry place.
- Clean using a soft, dry cloth.
 - Wiping the 3D Eyewear with a cloth that is covered in dust or dirt may scratch the eyewear. Shake off any dust from the cloth before use.
 - The lens of the 3D Eyewear is easily broken. Be careful when cleaning the lens.
- Do not use benzene, thinner or wax on the 3D Eyewear, otherwise this may cause peeling of the paint.
- Do not dunk the 3D Eyewear in liquid such as water.

Viewing 3D

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear.

- This TV supports Frame Sequential, Side by Side and Top and Bottom 3D formats.
 - Frame Sequential is the 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.

1. Put the 3D Eyewear on.

2. View the 3D images.

- Safety precautions will be displayed when you first watch the 3D image. Select **Yes** or **No** to continue to view 3D images.

If you select **Yes**, this message will be displayed again in the same condition after Mains Power On / Off switch is next turned on. Select **No** if you do not want to display this message again.

■ Playing back 3D-compatible Blu-ray disc (Frame Sequential)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable. (If you use the non 3D-compatible player, the images will be displayed in 2D mode.)
- If the input mode is not switched automatically, select the input mode connected to the player.

 → Watching > External equipment > Watching external input

■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player and Network services

 → Media Player

 → Network

■ 2D images converted to 3D

- Set to **2D→3D** mode in **3D Mode Selection**.

 → Watching > 3D > 3D Mode Selection

3D Mode Selection

You can easily change the viewing mode between 2D and 3D with **3D**.

1. Display **3D Mode Selection** with **3D**.
2. Select the mode with \triangle / ∇ and press **OK** to set.
 - Items of **3D Mode Selection** vary depending on the condition.


3D / 2D:

Displays the appropriate image as you desire without selecting 3D format.

- This mode may not work properly depending on the source image format. In this case, select the appropriate 3D format manually.

■ To change 3D format manually

When the image is not changed properly using **3D / 2D** mode, use this manual setting.

1. Display **3D Mode Selection (Manual)** with  (red) during above operation.
2. Select the mode with \triangle / ∇ and press **OK** to set.

Original:

Displays the source image as it is.

- Use to identify the format type of the source image.

 → Watching > 3D > Source image format

Side by Side - 3D / Side by Side - 2D / Top and Bottom - 3D / Top and Bottom - 2D:

Displays the mode you select.

- Not valid in Analogue TV and AV mode

2D→3D:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places such as shops or hotels, etc. may infringe on the rights of the copyright holder protected under copyright law.

3D Settings

1. Display the menu with **MENU**.
 2. Select **Picture > 3D Settings** with \triangle / ∇ and press **OK** to access.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
3D Detection / 3D Signal Message / 2D→3D Depth / 3D Adjustment / L/R Picture Swap / Edge Smoother / Safety Precautions
 4. Set with \triangle / ∇ and press **OK** to store.
 - To exit the menu screen
EXIT
-

3D Detection

(On (Advance) / On / Off)

Selects whether to switch to the 3D mode automatically or not.

On (Advance):

Detects all the 3D format signals and displays the 3D image automatically.

On:

Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically.

- To view 3D images without any notifications and operations, set to **On (Advance)**.
-

3D Signal Message

(On / Off)

Selects whether to give a notification message when a signal of 3D format is found or not.

- Not valid when **3D Detection** is set to **On (Advance)**
 - For Digital TV, Component and HDMI input
-

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in **2D→3D** mode)

Set to **On** to enable **Effect** setting.

- When setting to **On**, a safety precaution message will appear. Read it carefully and press **RETURN** to go to **Effect** setting.
- When adjusting, take into account that the vision of 3D images varies among different individuals.

Effect:

Adjusts the 3D depth according to the contents or to your preference.
(This setting will not be memorised when changing the input mode or channel.)

L/R Picture Swap

(**L/R (Normal)** / **R/L (Reversed)**)

Swaps pictures for left eye and right eye (except in **2D→3D** mode).

Select **R/L (Reversed)** if you feel that the sense of depth is unusual.

- This setting will not be memorised when changing the input mode or channel.
-

Edge Smoother

(**On** / **Off**)

Set to **On** if you feel the contoured parts of an image are not smooth enough (except in **2D→3D** mode).

Safety Precautions

Displays the precautions for viewing 3D images.













= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.

Source image format

If the picture appears to be abnormal, refer to the table of images that can be seen for each [3D Mode Selection \(Manual\)](#) and the source image format, and select the correct 3D mode.

- 3D images are displayed correctly with appropriate 3D format as following yellow boxes.

1	5			
	6	7	8	9
2				
3				
4				

1 Source image format

2 Side by Side

3 Top and Bottom

4 Normal format (2D)

5 [3D Mode Selection](#)

6 [Original](#)

7 [Side by Side - 3D](#)

8 [Top and Bottom - 3D](#)

9 [2D→3D](#)

*: When selecting [Side by Side - 2D](#) or [Top and Bottom - 2D](#), the images will be displayed without 3D effect.

- Depending on the player or broadcasts, the image may be different from the above illustrations.

Tuning and editing channels

Setting menu

You can retune channels, create your favourite channel lists, skip unwanted channels, etc.

1. Select Digital TV or Analogue TV with **TV**.
2. Display the menu with **MENU**.
3. Select **Setup > Tuning Menu** with Δ / ∇ and press **OK** to access.

[Digital TV Tuning Menu](#) / [Analogue TV Tuning Menu](#)

- The menu name varies depending on the TV mode.

4. Select one of the functions with Δ / ∇ and press **OK** to access.

[Favourites Edit](#) / [Channel List](#) / [Auto Tuning](#) / [Manual Tuning](#) / [Update Channel List](#) / [New Channel Message](#) / [Signal Condition](#) / [Add TV Signal](#)

Favourites Edit

■ List favourite Digital TV channels


Create your favourite channel lists from various broadcasters (up to 4: [Favourites 1 to 4](#)).

The favourites lists are available from [Favourites](#) in the information banner and the TV Guide screen.

 → [Watching > Basic > Information banner](#)

 → [Watching > TV Guide > Using TV Guide](#)

1. Select [Favourites Edit](#) with Δ / ∇ and press **OK** to access.
2. Select a channel to list from all Digital TV channels with Δ / ∇ .

-  appears when the channel is encrypted.
- To display other favourites

 (green)

3. Press **OK** to add it to favourites list.


- To add all channels to the list

 (yellow)




4. Press **RETURN** and **OK** to store.

■ Edit favourites list

You can edit the favourites list while the cursor is on the channel in the favourites list.

- To move the channel
 - 1) Select the channel with \triangle / ∇ .
 - 2) Press  (green).
 - 3) Select the new position with \triangle / ∇ or **Numeric buttons**.



- 4) Press  (green) to store.
- To delete the channel
 - 1) Select the channel with \triangle / ∇ .
 - 2) Press **OK** to delete.
 - Press  (yellow) to delete all channels.
 - To name the favourites
 - 1) Press  (red).
 - 2) Enter characters (maximum 10 characters) with \triangle / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- 3) Press **RETURN** to store.

= Note =

- Channel numbers are defined by the broadcaster and cannot be changed.
- Hidden channels can be selected but not viewed.

Channel List

■ Skip unwanted Digital TV / Analogue TV channels

You can hide (skip) unwanted channels. The hidden channels cannot be displayed except in this function.

1. Select **Channel List** with \triangle / ∇ and press **OK** to access.
2. Select a channel with \triangle / ∇ .
3. Press **OK** to set **Reveal** / **Hide** (skip).

: [Reveal](#)

: [Hide](#) (skip)


- To reveal all channels

 (yellow)

■ Edit Digital TV / Analogue TV Channels

- To swap / move the channel position (if available)

1) Press  (green) to edit.

2) Set the new position with **Numeric buttons** or Δ / ∇ , and press  (green) to store.



- To retune each channel ([Manual Tuning](#))

 (red)

 → [Watching > Tuning and editing channels > Manual Tuning](#)

- To rename the channel name (Analogue TV)

1) Press  (blue) to edit.

2) Enter characters (maximum 5 characters) with Δ / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



3) Press **RETURN** to store.

= Note =

- If a VCR is connected only with the RF cable in Analogue TV, edit [VCR](#).

Auto Tuning

Automatically retunes the channels received in the area.

- All the previous tuning settings are erased.
- Search begins in the order from the lower channels to the higher channels.
- If tuning has not been done completely, set [Manual Tuning](#).

 
 → [Watching > Tuning and editing channels > Manual Tuning](#)

1. Select [Auto Tuning](#) with Δ / ∇ and press **OK** to access.
2. The confirmation screen is displayed and press **OK** to start [Auto Tuning](#). (Settings are made automatically.)

- When the operation is completed, the channel at the lowest position will be displayed.
- This setting is applicable only for the selected TV mode.

■ Auto Tuning using the buttons on the TV

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Set [Auto Tuning](#) with following control panel buttons.
 - Move the cursor / select from a range of options / select the menu item (up and down only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

Manual Tuning

■ Digital TV

Normally use [Auto Tuning](#) or [Update Channel List](#) to retune Digital TV channels.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

- All Digital TV channels found will be added to [Channel List](#).
1. Select physical channel with \triangle / ∇ and select offset with \triangleleft / \triangleright .
 2. Press **OK** to search.

■ Analogue TV

Set Analogue TV channel manually after [Auto Tuning](#).

1. Select the channel position with **Numeric buttons**.



2. Select the channel with **Channel Up / Down**.



3. Search with \triangleleft / \triangleright .
4. Select [Store](#) with \triangle / ∇ and press **OK** to set.
 - If a VCR is connected only with the RF cable, select channel position 0.

Update Channel List

By updating the Digital TV channel list, you can add new channels, delete removed channels or change channel names and positions automatically.

- The channel list is updated while keeping your settings in [Favourites Edit](#), [Channel List](#), [Child Lock](#), etc.
- Depending on the signal condition, the update may not work properly.

New Channel Message

Selects whether to give a notification message when a new Digital TV channel is found or not.

- When a notification message appears, you can perform [Update Channel List](#) pressing **OK**.
- Sometimes, mainly during summer months at night, the TV may pick up distant TV stations outside your broadcast due to favourable short term ionosphere conditions. In such circumstances when you press **OK**, the TV does not add any new channels. This is normal.

Signal Condition

Selects a channel and checks the signal condition with indicators.

- A good Signal Strength is not an indication of suitable signal for Digital TV reception.
- To change the channel



- For Digital TV

Add TV Signal

Adds the TV mode.

- This function is available if you skip any modes to tune in [Auto Tuning](#) for first using the TV.

Recording

USB HDD setup


Preparations

You can record the digital TV programmes to the connected USB HDD and enjoy playing back in various ways.

- Prepare the USB HDD for the exclusive use of recording with this TV.
- Connect the USB HDD to the USB 2 port with the USB cable.
- Be sure to connect the USB HDD to the socket outlet.
- To remove the USB HDD safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).


 → [Recording > USB HDD setup > Setting for USB HDD](#)

- Check the terminal type and cable plugs are correct when connecting.

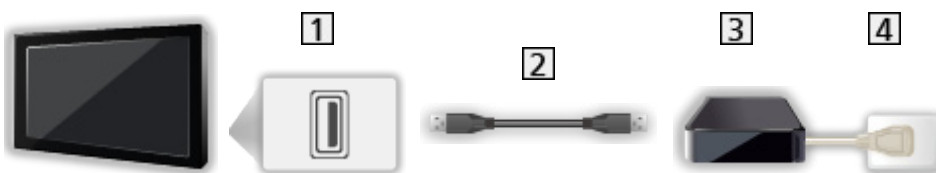

- 1** USB port
- 2** USB cable
- 3** USB HDD
- 4** Socket outlet

= Caution =

- All data in the USB HDD will be erased in the following cases:
 - When formatting the USB HDD with this TV
 -  → [Recording > USB HDD setup > Setting for USB HDD](#)
 - When formatting the USB HDD to use on PC, etc.
- When the TV is repaired due to a malfunction, you may have to format the USB HDD again with this TV to use it. (All data will be erased after formatting.)
- To use the USB HDD with your PC after recording with this TV, format it again on your PC. (Special operations or tools may be necessary to format on your PC. For details, read the manual of the USB HDD.)

- The data recorded on the USB HDD with this TV can only be played back on this TV. You cannot play back its contents with another TV (including the TV of the same model number) or any equipment.
- Do not turn the TV off, pull out the mains plug or remove the USB HDD during operation (formatting, recording, etc.). Doing so may cause malfunction of the device or damage the recorded data. (An electric outage may also be a cause of malfunction.)

= Note =

- Analogue TV programme cannot be recorded on the USB HDD.
- The data broadcasting (MHEG, etc.), radio broadcasting will not be recorded, and also the recording function will not work during the period without any signal.
- Not all the programmes can be recorded depending on the broadcaster and service provider.
- You cannot copy the recorded TV programmes of the USB HDD.
- For more information of the USB HDD

 → [Recording > Technical information > USB HDD](#)

Setting for USB HDD

Format and set up the USB HDD with this TV in order to use it for recording.

All the USB devices recognised as a mass storage device will be listed.

- Please note that USB HDD will be formatted and all data in it will be erased after this setup.
- Before setting, connect the USB HDD and be sure to turn on the USB HDD.

 → [Recording > USB HDD setup > Preparations](#)

1. Display the menu with **MENU**.
2. Select **Setup > USB Device Setup** with Δ / ∇ and press **OK** to access.
3. Select the USB HDD for recording with Δ / ∇ and press **OK** to start setup.
 - Some USB HDD may not be displayed.
 - To display information of the highlighted device

INFO

4. When the caution and confirmation screen for using USB HDD is displayed, select **Yes** with \triangleleft / \triangleright and press **OK** to proceed.

5. When the confirmation screen of USB HDD name is displayed, select **Yes** with ◀ / ▶ and press **OK** to set.

- The name for the USB HDD is created automatically. If you want to edit the name, select **Yes**.

1) Enter characters with ▲ / ▼ / ◀ / ▶ or **Numeric buttons**, and press **OK** to set.



2) Press **RETURN** to store.

6. When the confirmation screen to enable USB HDD for recording is displayed, select **Yes** with ◀ / ▶ and press **OK** to set.

- If another formatted USB HDD for recording already exists, this confirmation screen will be displayed to switch to enable this USB HDD for recording.

- Mode of the USB HDD

 : The USB HDD is available for recording / playing back.

Only one USB HDD on the list is available for recording.

 : The USB HDD is available for playing back.

- To change the mode

OK

- To edit USB HDD name

 (green)

- To format

 (red)

- To remove the USB HDD safely from the TV

 (yellow)

= Note =

- You can only select one USB HDD for recording at a time.
- You cannot change the settings for the USB HDD while recording is in progress.

Recording current programme

One Touch Recording

Records the current programme to the USB HDD immediately.

- Confirm the remote control code is “73”.

 → Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **One Touch Recording** with Δ / ∇ and press **OK** to access.
3. Select the maximum recording time **30 / 60 / 90 / 120 / 180 (minutes)** with Δ / ∇ and press **OK** to set.

■ To start One Touch Recording

Press  to start.

- Other channels cannot be selected while recording is in progress.

■ To stop recording in progress

Press  to stop.

■ To play back or delete the recorded contents

Recorded TV programmes can be played back in Media Player.

1. Display icons of the feature with **APPS**.
2. Select **Recorded TV** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

 → Media Player > Recorded TV mode

- Even if **One Touch Recording** is in progress, you can play back all the contents. (Depending on the USB HDD, playback may not be possible or the recording may not work properly during playback.)

REW LIVE TV

Records the current programme to the USB HDD constantly within the maximum recordable time.

- Confirm the remote control code is “73”.

 → Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **REW LIVE TV** with Δ / ∇ and press **OK** to access.
3. Select **Auto** with Δ / ∇ to start **REW LIVE TV**.
 - When you select **Auto**, recording will start automatically.
 - This recording may not start if another recording is in progress, TV signal condition is bad or there are no images displayed.

■ To operate REW LIVE TV

- To pause



- To search backward (up to 90 minutes)



- After pausing or searching backward, the following buttons are available for operation.

\triangleleft : Search backward

\triangleright : Search forward


∇ : Return to the current programme

OK : Playback / Pause

  : Search backward / Search forward

 : Pause / Resume

 : Playback

 : Return to the current programme

■ To stop REW LIVE TV

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **REW LIVE TV** with Δ / ∇ and press **OK** to access.
3. Select **Off** with Δ / ∇ to stop **REW LIVE TV**.
 - If you stop **REW LIVE TV**, the recorded content for **REW LIVE TV** will be deleted.
 - **REW LIVE TV** will be stopped and the recorded content will be deleted automatically in the following conditions: (Even if **REW LIVE TV** stops for the following conditions, as long as the setting is **Auto**, a new recording will start automatically in a condition that makes the recording available.)
 - Other channels selected
 - Locked channel selected
 - Invalid channel selected
 - No TV signal
 - External input selected
 - When the full-screen application (TV Guide, Media Player, eHELP, etc.) is launched
 - When the TV enters Standby or is turned off
 - When another recording starts

Timer Programming

Setting Timer Programming

This function allows you to select programmes that you want to be reminded to watch or record to the USB HDD.

- Not valid in Analogue TV
1. Select Digital TV with **TV**.
 2. Display the menu with **MENU**.
 3. Select **Timer** > **Timer Programming** with Δ / ∇ and press **OK** to access.

■ Set timer event details

1. Press **OK** to start making the settings.
2. Select **USB HDD Rec.** / **Reminder** with Δ / ∇ .

USB HDD Rec.:

Records the programme to the USB HDD.

When the start time comes, the channel will be switched automatically and the video and audio signals will be output. 2 minutes before the start time, a reminder message appears if you are watching TV.

Reminder:

Reminds you to watch the programme.

When you are watching TV, a reminder message appears 2 minutes before the start time. Press **OK** to switch to the programmed channel.

3. Select the item (channel, date, start time, end time) with \triangleleft / \triangleright and set **4** / **6** / **7** with Δ / ∇ .
 - **4** and **7** can also be entered with **Numeric buttons**.



(Example)

1	2	3	4	5	6	7
!	Function	Digital TV	1 ABC	STTL	--/--	--:-- --:-- (-- xxx)
					--/--	--:-- --:-- (-- xxx)
					--/--	--:-- --:-- (-- xxx)

1 !: Overlapped timer events

2 Function

(USB HDD Rec. / Reminder)

3 : Digital TV

4 Channel position, channel name, etc.

5 STTL: Displays subtitles (if available)

– Press (yellow) to indicate subtitles and press again to remove them.

– For [Reminder](#)

6 Date (You can set one day ahead with Δ , select daily or weekly with ∇ .)

– [Daily Sun-Sat](#): Sunday to Saturday

– [Daily Mon-Sat](#): Monday to Saturday

– [Daily Mon-Fri](#): Monday to Friday

– [Weekly Sat / Fri / Thu / Wed / Tue / Mon / Sun](#): Same time on the same day every week

7 Start time / End time / Duration (automatic display)

4. Store with .

Editing Timer Programming

1. Display the menu with **MENU**.
2. Select **Timer > Timer Programming** with Δ / ∇ and press **OK** to access.
3. Select the event with Δ / ∇ .

- To change a timer event

OK

- Correct as necessary.

 → **Recording > Timer Programming > Setting Timer Programming**

- To delete a timer event

1) Press  (red).

2) Press **OK** to delete.

- To display subtitles (if available)

 (yellow)

- Press again to remove subtitles.

- For **Reminder**

- To cancel a timer event temporarily

 (blue)

- Press again to stop cancelling.

■ To adjust the clock

If you cannot get the time information, set **Clock Settings** manually.

1. Display the menu with **MENU**.
2. Select **Timer > Clock Settings > Mode** with Δ / ∇ and press **OK** to access.
3. Select **Manual** with Δ / ∇ and press **OK** to set.
4. Set **Date / Time** with $\Delta / \nabla / \triangleleft / \triangleright$ or **Numeric buttons**.

1	2	3
4	5	6
7	8	9
	0	

- **Clock Settings** are reset when the TV is turned off with Mains Power On / Off switch.

 → **Watching > Basic > Adjusting time**

■ To play back or delete the recorded contents

Recorded TV programmes can be played back in Media Player.

1. Display icons of the feature with **APPS**.
2. Select **Recorded TV** with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.

 → Media Player > Recorded TV mode

Remote recording

You can set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

- Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- Set **TV Anytime** to **On**.

 → Network > Network settings > TV Anytime Settings

- Additional information for the services may be found on the following website.

<http://panasonic.net/viera/support> (English only)

= Note =



- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition, this function may not be available.

Note

- **TV Guide** may also be used to set timer event.

 → Watching > TV Guide > Timer Programming

- **Timer Programming** can store up to 15 events.
- **Timer Programming** only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- For recording using **Timer Programming**, the TV must be either on or in Standby. For reminders to be displayed, the TV must be on.
- No other channels can be selected while the recording of **Timer Programming** is in progress.
- Recording an encrypted (copy-protected) programme may not be possible.
- 2 minutes before the start time, a reminder message appears if you are watching TV.
 - To remove the message and start the programming, press **OK**.
 - To cancel the programming, press **EXIT**.

- LED will turn to orange in Standby mode if [Timer Programming](#) is set.
- Reminder messages will remain displayed until one of the following occurs:
 - You press **OK** to view the programme or **EXIT** to cancel the reminder.
 - The timer event that the reminder is set for ends.
- “!” identifies that two or more timer events are overlapped. [USB HDD Rec.](#) is given priority over [Reminder](#). As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of [Timer Programming](#) will automatically change the channel to the programmed channel a few seconds before the start time.
- The recording of [Timer Programming](#) will be performed even if the TV is in [REW LIVE TV](#) recording. In this case, [REW LIVE TV](#) recording will be cancelled.
 -  → [Recording > Recording current programme > REW LIVE TV](#)
- For more information of the USB HDD
 -  → [Recording > Technical information](#)

Technical information

USB HDD

■ USB HDD

(for recording the digital TV programmes with this TV)

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → Recording > USB HDD setup > Setting for USB HDD

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

= Note =

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.

Media Player

Using Media Player

Information

Media Player allows you to enjoy photo, video or music recorded on the SD Card / USB Flash Memory / network device, and contents recorded with this TV to the formatted USB HDD.

(Example)

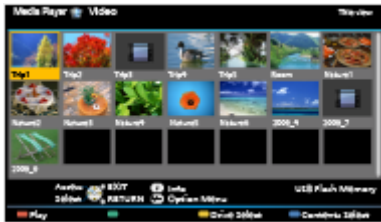


Photo mode:

Still pictures recorded with digital cameras will be displayed.

Video mode:

Moving pictures recorded with digital video cameras and digital video data will be played back.

Recorded TV mode:

(For exclusive USB HDD) TV programmes recorded on the USB HDD with this TV will be played back.

Music mode:

Digital music data will be played back.


- During the operation, audio signal is output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → [Functions > VIERA Link "HDAVI Control™"](#)

- **Date** shows the date on which the recording was made by the recording equipment. For a file without a valid record date “* * *” is shown.
- Pictures may not appear correctly on this TV depending on the recording equipment used.
- Displaying may take some time when there are many files and folders.
- Partially degraded files may be displayed with reduced resolution.
- Picture setting may not work depending on the conditions.
- Folder and file names may be different from those on the digital camera or digital video camera used.

■ To insert or remove the SD Card

Gently insert the SD Card with the label surface facing front. Push the centre of the card until a click is heard. (To remove, push it again.)

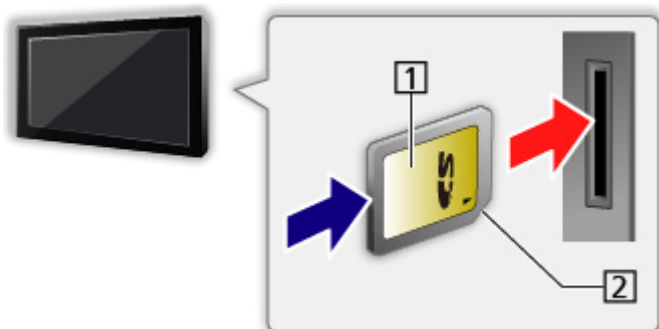


1 Label surface

2 Cutout

■ To insert or remove the USB Flash Memory

Ensure alignment is straight and complete when inserting or removing.

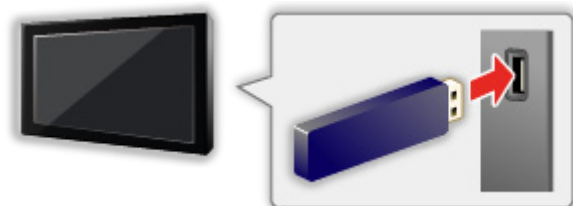



- To remove the USB Flash Memory safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).
 - 1) Display the menu with **MENU**.
 - 2) Select [Setup](#) > [USB Device Setup](#) with Δ / ∇ and press **OK** to access.
 - 3) Select the device with Δ / ∇ and press **YELLOW** (yellow) to set.
- Connect the USB Flash Memory to the USB 1 or 2 port.

= Note =


- To connect the USB HDD
 - [Recording > USB HDD setup](#)
- Check the terminal type and devices are correct when connecting.
- For the information of the devices
 - [Media Player > Technical information](#)
- For supported file formats
 - [Media Player > Technical information](#)


Selecting device / mode

1. Insert the SD Card or USB Flash Memory to the TV.
 - When you insert the SD Card, Media Player will start automatically.
 → Media Player > Using Media Player > Information
 - To play back contents in the USB HDD, ensure the connection and settings are completed.
 → Recording > USB HDD setup
 - To play back contents in the network device, ensure the connection and settings are completed.

 → Media Player > Using Media Player > Network device

2. Display APPS List with **APPS**.
3. Select **Media Player** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
4. Select the device with \triangleleft / \triangleright and press **OK** to access.
 - If only one device is connected, this step will be skipped.
 - The network device already connected to the TV is also displayed.

 : Enter **User** / **Password** to access.

 : **User** / **Password** are already entered.
5. Select **Photo** / **Video** / **Music** / **Recorded TV** with \triangleleft / \triangleright and press **OK** to access.

Photo

 → Media Player > Photo mode

Video

 → Media Player > Video mode

Music

 → Media Player > Music mode

Recorded TV

 → Media Player > Recorded TV mode

6. The thumbnail view will be displayed.
(Example)



- To display / hide information of the highlighted content

 
INFO

= Note =

- You may also access each mode directly from APPS List.

 → [my Home Screen > APPS List > How to use](#)


- **Recorded TV** is available for contents recorded on the USB HDD with this TV.
- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → [Watching > External equipment > Operating with TV's remote control](#)

■ To change the device


You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the device selection screen with  (yellow) while the thumbnail is displayed.
 2. Select the device with ◀ / ▶ and press **OK** to access.
- Not valid in Recorded TV mode
 - To change the device in Recorded TV mode

 → [Media Player > Recorded TV mode > Changing device](#)

■ To change the mode

You can switch to another mode of Media Player from the thumbnail view.

1. Display the contents selection screen with  (blue) while the thumbnail is displayed.
 2. Select the contents with ◀ / ▶ and press **OK** to access.
- The mode can be switched in the current device.

Network device

You can enjoy photo, video or music stored in the network devices.

- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

■ How to set User / Password

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **Network Device List** with Δ / ∇ and press **OK** to access.
3. Select the network device with Δ / ∇ and press **OK** to access.
4. Enter **User** / **Password** with Δ / ∇ / \triangleleft / \triangleright or **Numeric buttons** and press **OK** to set.



- Press **RETURN** to store.
 - To register the new network device, set **Server Name** / **Shared Folder**. For details, read the manual of the equipment.
5. Select **Register** with Δ / ∇ and press **OK** to set.
 - To delete the registered device, select **Delete** with Δ / ∇ and press **OK** to set.

= Note =


- Regarding performance, not all servers are guaranteed. PCs with Windows 7 / Windows 8 / Windows 8.1 have been tested for compatibility with this TV (as of December, 2013). Additional information for the servers may be found on the following website.

<http://panasonic.net/viera/support> (English only)

Photo mode

Selecting file

Select the file in the thumbnail view with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to start playback.

 : Error display

- To change the size of photos in the thumbnail view
 - 1) Display the option menu with **OPTION**.
 - 2) Select **Change Size** with \triangle / ∇ and press **OK** to change.
- For supported file formats

 → [Media Player > Technical information > Photo format](#)

■ Thumbnail view

- To display / hide information of the highlighted content

 **INFO**

- To display **Slideshow Settings**


 (red)

 → [Media Player > Photo mode > Using Slideshow](#)

- To sort

 (green)

- To change the device

 (yellow)

- To change the contents

 (blue)

Viewing photo

■ Playback

- To operate Single view
 - ◀ : To the previous photo
 - ▶ : To the next photo
 - ▽ : Stop (return to thumbnail)
 - OK : Slideshow
- To display / hide the operation guide
INFO
- To rotate 90°
■ (blue)
- To return to thumbnail
RETURN

Sorting photos

■ To sort by folder, recorded date or recorded month

1. Display the view selection in the thumbnail view with ■ (green).
2. Select [Folder view](#) / [Sort by Date](#) / [Sort by Month](#) with ▲ / ▼ and press OK to set.

[Folder view](#):

Displays the thumbnail grouped by folder.

- Files which are in the root folder will be collected to the folder named “/”.

[Sort by Date](#) / [Sort by Month](#):

Displays the thumbnail grouped by the same date or month.


- The group of the photos without recorded dates is shown as [Unknown](#).

- To return to the thumbnail of all photos
 - 1) Display the view selection in the thumbnail view with ■ (green).
 - 2) Select [All photos](#) with ▲ / ▼ and press OK to set.

Multi Shot 3D

This TV can create a 3D photo using a pair of photos and save it.

- You can only save the image into the SD card.
- This function is available with photos recorded on digital cameras.
- Depending on the photos you select, they may not be suitable for creating 3D photos, or creating 3D photos may not be possible. In this case, it is recommended to take a photo (for L) and then move your camera to the right approx. 5 cm and take another photo (for R).
- To view the created 3D photo with 3D effect, you need the 3D Eyewear.


1. Display the option menu in the thumbnail view with **OPTION**.
2. Select **Multi Shot 3D** with Δ / ∇ and press **OK** to access.
3. Select two photos for L (left) and R (right) with Δ / ∇ / \triangleleft / \triangleright and  (red).
 - You can only select photos of the same recorded date and the same pixels.
 - You may not be able to view the created 3D photo properly if you transpose the left and right photos.
4. Create the 3D photo with **OK**.
 - If your selected photos are not suitable for the 3D photo, the error message will be displayed and you will return to the photo selection screen (step 3).
 - To save the 3D photo in the SD Card, press **OK** and follow the on-screen instructions.
 - After the photo is saved, the photo selection screen will be displayed (step 3). Select photos again to create another 3D photo or exit from **Multi Shot 3D**.

■ To enjoy the saved 3D photos

Saved 3D photos are displayed in the thumbnail view. Wear the 3D Eyewear and enjoy the 3D photos.

Using Slideshow

Slideshow ends when all photos within the current thumbnail are viewed.

1. Select the file from the thumbnail of photos for the first view with \triangle / ∇ / \triangleleft / \triangleright .
2. Start Slideshow with  (red) and **OK**.
 - To display / hide the operation guide
INFO
 - To pause (return to Single view)
OK
 - To return to thumbnail
RETURN
 - You can change the back ground music by setting [Back Ground Music](#) in [Slideshow Settings](#) (see below).

■ Slideshow Settings

Set up the settings for Photo mode.

1. Display the option menu with **OPTION**.
 2. Select [Slideshow Settings](#) with **OK**.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Frame](#) / [Colour Effect](#) / [Transition Effect](#) / [Auto Makeup](#) / [Screen Mode](#) / [Burst Playback](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
 4. Set with \triangle / ∇ and press **OK** to store.
-

Frame

([Off](#) / [Multi](#) / [Collage](#) / [Drift \(+ calendar\)](#) / [Drift](#) / [Gallery \(+ calendar\)](#) / [Gallery](#) / [Cinema](#))

Selects the frame type of the slideshow.

Multi:

9 photos are displayed orderly at once.

Collage:

Each photo is displayed at a random position and random scale.

[Drift \(+ calendar\)](#) / [Drift](#):

Photos are displayed with flow images.

- You can select whether to display the calendar or not. The month of calendar is changed with \triangleleft / \triangleright .

Gallery (+ calendar) / Gallery:

Various sizes of photos in the frames are displayed.

- You can select whether to display the calendar or not. The month of calendar is changed with ◀ / ▶.

Cinema:

Photos are displayed as old films (sepia tone).

Colour Effect

(Off / Sepia / Gray scale)

Selects the colour effect of photos.

- Not valid when **Frame** is set to **Drift**, **Gallery** or **Cinema**
-

Transition Effect

(Off / Fade / Dissolve / Motion / Random)

Selects the transition effect for switching photos during the slideshow.

Fade:

The next photo fades in gradually.

Dissolve:

Each photo is dissolved when switching to the next photo.

Motion:

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

Random:

The transition effect is selected at random.

- This function is available when **Frame** is set to **Off**.
-

Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

Screen Mode

(Normal / Zoom)

Selects enlarged or normal viewing.

- Not valid when **Frame** is set to **Collage**, **Drift**, **Gallery**, **Cinema** or when **Transition Effect** is set to **Motion**

- Depending on the photo size, the photo may not be fully enlarged to fill the screen (e.g. portrait style picture).
-

Burst Playback

(On / Off)

Selects whether to display burst photos in a fast-paced slideshow mode or not.

- Not valid when **Frame** is set to **Drift**, **Gallery**, **Cinema** or when **Transition Effect** is set to **Motion**
-

Interval

(Long / Normal / Short)

Selects slideshow interval.

- Not valid when **Frame** is set to **Drift**, **Gallery**, **Cinema** or when **Transition Effect** is set to **Motion**
-

Repeat

(On / Off)

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5 / User / Auto)

Selects the background music during Photo mode.

Type1 - 5:

Music files installed on this TV at the factory settings will be played back.

Auto:

Music files stored in the current device will be played back.

- If there is no available music data, no sound will be played back.

User:

Music files in the device registered by yourself will be played back.

- If no music files have been registered or the device which had registered music files is removed, no sound will be played back.

- To register music

- 1) Select the music file with \triangle / ∇ and press **OK** to access.

- Depending on the condition of the device, select folders until you reach the desired music file.

- 2) Select **File** / **Folder** with \triangle / ∇ and press **OK** to set.

File:

The selected music file will be registered.

Folder:

All the music files in the folder which contains the selected music file will be registered.


= Note =


- Picture quality may be degraded depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

Video mode

Selecting file

1. Select the title in the thumbnail view with  /  /  / .

 : Error display

 : The file does not support thumbnail view.

- The preview will start when the title / scene is highlighted in the thumbnail view if it supports a preview. To turn off the preview, set [Video Preview](#) to [Off](#).

 → [Media Player > Video mode > Video Setup](#)

2. Start playback with  (red).

- If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
- For supported file formats

 → [Media Player > Technical information > Video format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the device

 (yellow)


- To change the contents

 (blue)

Watching video



■ Playback from the selected scene in the title

Playback of the selected scene will start and continue until the end of the title.

1. Select the title with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
 2. Select the scene with $\triangle / \nabla / \triangleleft / \triangleright$.
 3. Start playback with  (red).
- The structure of titles and scenes may vary depending on the digital video camera used.
 - Playback may not continue depending on the condition.
 - To repeat playback

 → Media Player > Video mode > Video Setup

■ Playback

- To operate playback
 - \triangleleft : Rewind
 - \triangleright : Fast forward
 - ∇ : Stop
 - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
 - 1) Display the time seek bar with **OK**.
 - 2) While the time seek bar is displayed
 - Press $\triangleleft / \triangleright$:
Search approx. 10 seconds
 - Press and hold $\triangleleft / \triangleright$:
Search rapidly
 - 3) Jump to the specified time point with **OK**.
- To display / hide the operation guide and information banner
INFO
- To the previous title / scene
 (red)
- To the next title / scene
 (green)

- To change aspect
 - 1) Display [Aspect Selection](#) with **ASPECT**.
 - 2) Select the mode with \triangle / ∇ and press **OK** to set.
 - [Aspect1](#):
Displays the content enlarged without distortion.
 - [Aspect2](#):
Displays the content full-screen.
 - [Original](#):
Displays the content original size.
 - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
 - Aspect cannot be changed depending on the content.
- To return to thumbnail
RETURN

Video Setup

Set up the settings for Video mode.

1. Display the option menu with **OPTION**.
2. Select [Video Setup](#) with **OK**.
3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Video Preview](#) / [Audio Selection](#) / [Dual Mono Audio](#) / [Subtitle](#) / [Subtitle Text](#) / [Repeat](#)
 - Menu items and selectable options vary depending on the content.
4. Set with \triangle / ∇ and press **OK** to store.

[Video Preview](#)

(On / Off)

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
 - This function is available in the thumbnail view.
-

[Audio Selection](#), [Dual Mono Audio](#)

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the title or selected file (depending on the content)

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Recorded TV mode

Selecting content

- For exclusive USB HDD
- To play back contents in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup





1. Contents list of the selected device is displayed in Recorded TV mode.
 - Remaining capacity of the selected device is displayed on the top right. (This value may not be accurate depending on the condition.)
 - Contents list is displayed as **All** or **Not Viewed**.




All:

All the recorded TV programmes are listed.

Not Viewed:

Contents not played back yet are listed.

- Icons are displayed.
 -  : Content not played back yet (Once you play back the content, this icon will disappear.)
 -  : Protected content cannot be deleted.
 -  : Content under recording (You can play back this content even if under recording.)
 -  : Two or more contents are grouped.

2. Select the content with  /  and press  to start playback.
 - If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
 - If the content has multiple programmes with different parental ratings, the highest restriction is applied to the content. Once you unlock the restriction, all the programmes in the content can be played back.
- For supported file formats

 → Media Player > Technical information > Video format

Watching recorded TV

■ Playback

- To operate playback


 : Manual skip

- Press to skip forward approx. 30 seconds.
- Press and hold to skip backward approx. 15 seconds.


 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar) / Playback



- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To display / hide the operation guide and information banner



- To repeat between the starting point “A” and finishing point “B”

 (blue)

(Set “A” and “B” in order.)

- The points will be reset by pressing again or by other operations.

- To the previous / next chapter

 (red) /  (green)

- A recorded content is automatically divided into chapters (approx. 5 minutes for each).

- To change aspect



 → Watching > For best picture > Aspect

- To display the subtitle (if available)




- To confirm or change the current status (if available)

 → Watching > Basic > Option Menu

- To return to list

RETURN

Grouping contents

1. Select the content to edit with \triangle / ∇ and press  (blue) to tick in the contents list.
2. Display the option menu with **OPTION**.
3. Select [Create Group](#) / [Release Group](#) / [Exclude from Group](#) / [Change Protect Status](#) with \triangle / ∇ and press **OK** to set.

[Create Group](#):

Two or more contents can be grouped. Select and tick all the desired contents, and then select [Create Group](#).

[Release Group](#):

Select the created group to release, and then select [Release Group](#). (To release several groups at once, tick all the desired groups.)



[Exclude from Group](#):

Select the group and press **OK** to display the grouped contents. To exclude one specific content from the group, tick it and then select [Exclude from Group](#). (To exclude several contents at once, tick all the desired contents.)

[Change Protect Status](#):

Select the content to protect from deletion, and then select [Change Protect Status](#). Perform the same way to cancel the protection. (To change the status of several contents at once, tick all the desired contents.)

Deleting content

1. Select the content to edit with \triangle / ∇ and press  (blue) to tick in the contents list.
2. Delete the content with  (red).
3. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.


Changing device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the option menu with **OPTION**.
2. Select **Drive Select** with \triangle / ∇ and press **OK** to access.
3. Select the device with $\triangleleft / \triangleright$ and press **OK** to access.
 - If you select the device to play back photos, videos or music, change to the appropriate content.
 - 1) Display the option menu with **OPTION**.
 - 2) Select **Contents Select** with \triangle / ∇ and press **OK** to access.

Chapter List

You can start playback from the chapter list you select.

1. Display the chapter list with  (yellow).
2. Select the chapter with $\triangleleft / \triangleright$ and press **OK** to start playback.

= Note =

- The chapter list is not displayed while the selected content is being recorded.
- Depending on the recorded programmes, some playback operations may not work properly.

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.



PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Music mode

Selecting file

1. Select the folder in the thumbnail view with $\triangle / \nabla / \triangleleft / \triangleright$.
2. Start playback with  (red).
 - For supported file formats
 → [Media Player > Technical information > Music format](#)

■ Thumbnail view

- To display / hide information of the highlighted content

 INFO

- To start playback

 (red)

- To change the device

 (yellow)

- To change the contents

 (blue)

Playing music

■ Playback of the selected file in the folder


1. Select the folder with $\triangle / \nabla / \triangleleft / \triangleright$ and press  to access.
2. Select the file with $\triangle / \nabla / \triangleleft / \triangleright$.
3. Start playback with  (red).


■ Playback

- To operate playback


 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press ◀ / ▶ :

Search approx. 10 seconds

Press and hold ◀ / ▶ :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide

INFO

- To the previous track

 (red)

- To the next track

 (green)

- To return to thumbnail

RETURN

Music Setup

Set up the setting for Music mode.

- This function is available in the thumbnail view.
1. Display the option menu with **OPTION**.
 2. Select **Music Setup** > **Repeat** with **OK**.
 3. Select **Off** / **Folder** / **One** with ▲ / ▼ and press **OK** to set.

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

USB Sharing

USB Sharing

You can copy the contents from one device to another using the USB ports and SD Card slot.

- To enable this function, connect the source drive and destination drive to the TV.



 → [Media Player > Using Media Player > Information](#)

Source drive:

USB device / SD Card which contains the data to be copied.

Destination drive:

USB device / SD Card which you copy to.

1. Display APPS List with **APPS**.
2. Select **USB Sharing** with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
3. Select the drive from **Source drive** with Δ / ∇ and press **OK** to access.
4. Select the folder or file to copy with Δ / ∇ and press  (red) to set.
 - To select all folders or files at once
 (green)
5. Press \triangleright to go to **Destination drive**.
6. Select the drive with Δ / ∇ and press **OK** to access.
 - You cannot select the source drive as the destination drive.
7. Select **Copy Here** with Δ / ∇ and press **OK** to access.
8. When the confirmation screen is displayed, select **Yes** with $\triangleleft / \triangleright$ and press **OK** to start copying.
 - Copy progress is shown on the top right of the TV screen. When copying is finished, **Complete!!** is displayed.
 - To cancel the copying, select **USB Sharing** from APPS List again.
 - To watch TV while data copying is in progress, press **TV**.

■ Create a folder or delete a folder

You can create a new folder or delete an old folder while the cursor is in [Destination drive](#).

- To create a new folder
 - 1) Display the option menu with **OPTION**.
 - 2) Select [Create Folder](#) with \triangle / ∇ and press **OK** to access.
 - 3) Enter characters (maximum 16 characters) with $\triangle / \nabla / \triangleleft / \triangleright$ or **Numeric buttons**, and press **OK** to set.



- 4) Press **RETURN** to store.
- To delete an old folder
 - 1) Select the folder with \triangle / ∇ .
 - 2) Display the option menu with **OPTION**.
 - 3) Select [Delete](#) with \triangle / ∇ and press **OK** to access.
 - 4) When the confirmation screen is displayed, select [Yes](#) with $\triangleleft / \triangleright$ and press **OK** to delete.

= Note =

- Not valid for the contents in the network device
- Some files may not be copied properly.
- Please note there may be a risk of file corruption due to power failure or sudden shut down during [USB Sharing](#) process.
- In consideration of possible loss of the data included in your USB devices or SD card for any reasons, Panasonic recommends to store or back up the data included in the USB devices or SD card to the other places (storage medium) before inserting the same in the USB port or SD card slot, and please do not turn the TV off during data communication / transfer.

Technical information


Device handling caution

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals to prevent data deterioration, data damage or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

SD Card

■ SD Card

Use an SD Card which meets SD standards. Failure to do so may cause the TV to malfunction.

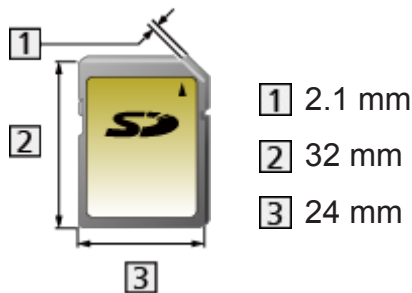

Card format:

SDXC Card - exFAT

SDHC Card / SD Card - FAT16 or FAT32

Compliant card type (maximum capacity):

SDXC Card (64 GB), SDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB) (miniSD adaptor required)

- When using a miniSD Card, insert / remove it together with the adaptor.

USB devices

- It is recommended to connect the device to the TV's USB port directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices using a USB card reader.
- Additional information for the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

■ USB Flash Memory

USB Flash Memory format:

FAT16, FAT32 or exFAT

- USB HDDs formatted on a PC are not guaranteed to work in Media Player.

■ USB HDD

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → [Recording > USB HDD setup > Setting for USB HDD](#)

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

● SD-Video (.mod)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

● AVCHD (.mts)

Video codec:

H.264 BP/MP/HP

Audio codec:

Dolby Digital

- AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-

● AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA, WMA Pro

- Some subtitles or chapter functions may not be available.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3, Vorbis

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MPEG Audio, MP3

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3

■ Supported Subtitles formats

- MicroDVD, SubRip, Tmplayer (.srt, .sub, .txt)

- The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

Music format

■ Supported Music formats

- MP3 (.mp3)

- AAC / Apple Lossless (.m4a)

- Copy-protected files cannot be played back.
-

- FLAC (.flac)

- WMA / WMA Pro (.wma)

- Copy-protected files cannot be played back.
 - WMA Lossless is not supported.
-

- LPCM (.wav)

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.


Network

Internet content

Information

You can access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from APPS List.

(Example)

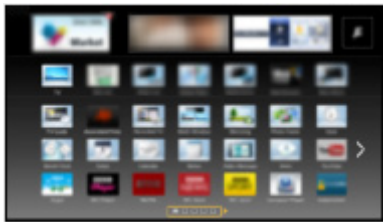

- To enable this function, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

Selecting internet content

1. Display APPS List with **APPS**.


- For details of APPS List

 → my Home Screen > APPS List

- Depending on the usage conditions, it may take a while to read all the data.

2. Select the desired item with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.

(Example)

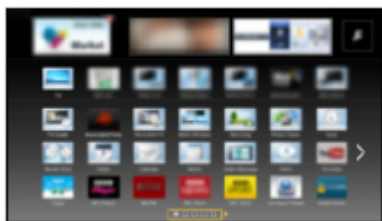





- To return to APPS List




APPS

- To exit APPS List

EXIT

- You may operate the internet contents with the free cursor and Voice Control function of Touch Pad Controller (supplied).
 → [Functions > Voice Control](#)
- You can connect a keyboard for character input in the applications. You can also use the keyboard for TV operation as well as for APPS List.
 → [Functions > Bluetooth devices](#)
 → [Functions > Keyboard](#)
- Video communication requires an exclusive Communication Camera TY-CC20W. For details, read the manual of the Communication Camera.
 → [Support > Optional accessories > Communication Camera](#)

Note

- If you cannot access the internet contents, check the network connections and settings.
 → [Network > Network connections](#)
 → [Network > Network settings](#)
- APPS List is subject to change without notice.
- Not all the features of the websites are available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use APPS List. You can update the software later manually.
 → [Network > Network settings > Software Update](#)
- The services through APPS List are operated by their respective service providers and such service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the contents or the continuity of the services.
- Some contents may be inappropriate for some viewers.
- Some contents may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

DLNA

Information

This TV is a DLNA Certified™ product.

DLNA® (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit www.dlna.org.

- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

■ Playback of sharing contents stored in the media server

Store photos, videos or music contents into the DLNA Certified media server (for example, PC with Windows 7 / Windows 8 installed, DIGA Recorder, etc.) connected to your home network. And then you can enjoy these contents on this TV.

(Example)



- For watching and operating contents on this TV

 → Network > DLNA > Using DLNA

- For supported file formats

 → Network > Technical information

- To use a PC as a media server

Prepare the PC with Windows 7 / Windows 8 or ensure the server software is installed on the PC. “Windows 7 / Windows 8” and “Twonky 7 (installed on the PC with Windows XP or Mac)” are the server software that has been tested for compatibility with this TV (as of December, 2013). Any other server software has not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7 / Windows 8

The setup for homegroup settings of Windows 7 / Windows 8 is required. For details, refer to the help functions of Windows 7 / Windows 8.

- Twonky

“Twonky” is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting “Twonky”, visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

= Note =

- For more information about the server software, please consult each software company.
- When server software for the media server is installed on the PC, the data on the PC may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances in office, hotel or even at home when not using a router.

- To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can control it as one of the media servers.

- Please read the manual of your DIGA Recorder to check if the recorder is compatible with DLNA.

■ Playback of sharing contents on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy contents stored in the media server by controlling with the DMC network equipment (smartphone, PC with Windows 7 / Windows 8 installed, etc.) connected to your home network.

- To use this function with your smartphone or Windows 7 / Windows 8, set [TV Remote App Settings](#) of this TV.

 → [Network > Network settings > TV Remote App Settings](#)

And you need to install the application for controlling VIERA on your smartphone. For information of the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- “Windows 7 / Windows 8” are the OS that have been tested for compatibility of this TV (as of December, 2013). For the operations, refer to the help functions of Windows 7 / Windows 8.

■ Sharing the TV programme or contents of this TV with another piece of network equipment

You can enjoy the current digital TV programme or the contents*¹ of this TV on the other DLNA Certified VIERA, your smartphone, etc. connected to your home network. You can also select the channel and watch TV on your smartphone*².

For example, watching the TV programme on your smartphone in the other room, etc.

*¹ : Available contents:

- Contents that can be played back in Media Player of this TV and another piece of network equipment
- TV programmes recorded on USB HDDs with this TV

*² : To use this function with your smartphone, you need to install the application for controlling VIERA in your smartphone. For information of the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- To use this function with another DLNA Certified VIERA, set [Network Link Settings](#) of this TV.

 → [Network > Network settings > Network Link Settings](#)

- Sharing the current programme may not be available when selecting radio channels, encrypted (copy-protected) programmes or when the broadcast prohibits the output of video and audio.

= Note =

- To use this function, turn this TV on.
- This function is available only with 1 piece of other equipment.
- You may be able to control this TV using your smartphone. For details, refer to the support information of the application.
- Display the TV full-screen for sharing the TV programme with another piece of network equipment.
- This function may not be available in the following conditions of this TV:
 - While recording is in progress
 - 3D

Using DLNA

To use DLNA® features, ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with Δ / ∇ and press **OK** to access.

(Example)



- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → Watching > External equipment > Operating with TV's remote control

Network connections

Internet connection

To use internet service, you need a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality, respectively. If the transfer speed is not enough, contents may not be played back properly.

■ Wireless connection



1 Built-in wireless LAN (Rear of the TV)

2 Access point

3 Internet environment

■ Wired connection



1 ETHERNET terminal

2 LAN cable (Shielded)

- Use the Shielded Twist Pair (STP) LAN cable.

3 Internet environment


DLNA connection

To use DLNA features, you need a home network environment and you can operate the features without a broadband network environment.

- To use internet service, you need a broadband network environment.


 → [Network > Network connections > Internet connection](#)

■ Wireless connection (For DLNA and internet service)

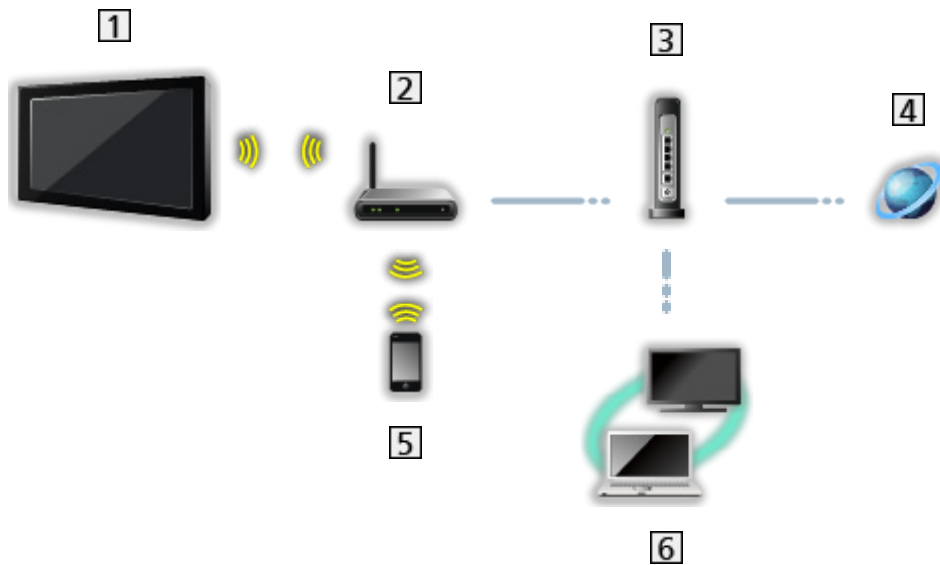

- 1 Built-in wireless LAN (Rear of the TV)
- 2 Access point
- 3 Hub or Router
- 4 Internet environment
- 5 Smartphone
- 6 DLNA Certified media server (PC, etc.)

■ Wired connection (For DLNA and internet service)

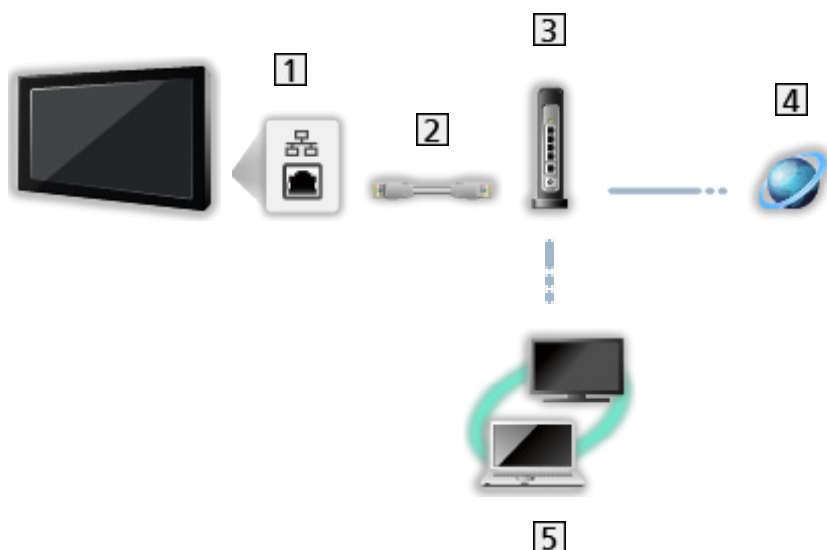

1 ETHERNET terminal

2 LAN cable (Shielded)


- Use the Shielded Twist Pair (STP) LAN cable.

3 Hub or Router

4 Internet environment

5 DLNA Certified media server (PC, etc.)

■ Wireless connection (For DLNA)

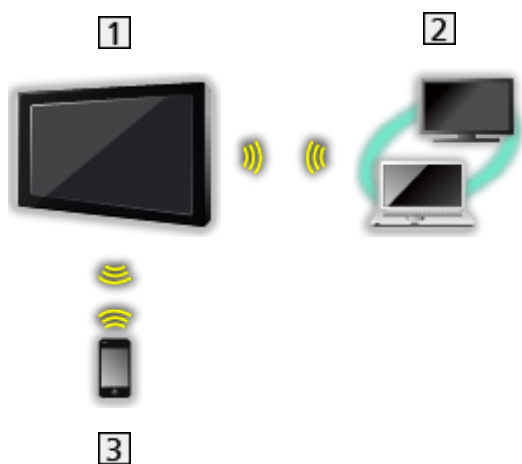

1 TV

- To use the TV as a wireless access point

 → Network > Network settings > Custom - Wireless Access Point

2 DLNA Certified media server (PC, etc.)

3 Smartphone

Note

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 or later LAN cables are required.
- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off with Mains Power On / Off switch, and then on again when changing or making the network connection again.
- Depending on the network condition, the content may not be played back properly.


Network settings

Network Connection

Ensure the connections are completed before starting network setup.

 → Network > Network connections

■ Quick setup - Wireless

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** with Δ / ∇ and press **OK** to access.
 - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** with \triangleleft / \triangleright and press **OK** to access.
 - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point with Δ / ∇ and press **OK** to access.
 - Available Wireless Networks are displayed automatically.
 -  : Encrypted access point
 - For WPS(Push button)
 - 1) Select **Easy setup with Push button** with Δ / ∇ and press **OK** to access.
 - 2) Press the WPS button on the access point until the light flashes.
 - 3) Connect the TV with the access point with **OK**.
 - WPS: Wi-Fi Protected Setup™
 - If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.
 - It is recommended to select the encrypted access point.
5. Enter the encryption key of the access point with Δ / ∇ / \triangleleft / \triangleright and press **OK** to set.
 - You can set characters using **Numeric buttons**.

1	2	3
4	5	6
7	8	9
0		
 - Press **RETURN** to store.
6. Automatically setup is done and **Network Status** is displayed.

 → Network > Network settings > Network Status

7. Select **Exit** with ◀ / ▶ and press **OK** to set.

- To set manually

 → Network > Network settings > Custom - Wireless


■ Quick setup - Wired

1. Display the menu with **MENU**.

2. Select **Network** > **Network Connection** with ▲ / ▼ and press **OK** to access.

3. Select **Quick setup** with ◀ / ▶ and press **OK** to access.

4. Automatically setup is done and **Network Status** is displayed.

 → Network > Network settings > Network Status

5. Select **Exit** with ◀ / ▶ and press **OK** to set.

- To set manually

 → Network > Network settings > Custom - Wired

= Note =

- When the network connection type is set to **Wired**, **Wireless** is deactivated.

Custom - Wireless

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.

2. Select **Network** > **Network Connection** > **Custom** > **Wireless** with ▲ / ▼ / ◀ / ▶ and press **OK** to access.

- Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.

3. Select your desired access point with ▲ / ▼ and press **OK** to access.

- Available Wireless Networks are displayed automatically.

 : Encrypted access point

- For **WPS(Push button)**




1) Press  (red).

2) Press the WPS button on the access point until the light flashes.

3) Connect the TV with the access point with **OK**.

– WPS: Wi-Fi Protected Setup™

– If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.

- For **WPS(PIN)**
 - 1) Press  (green).
 - 2) Enter the PIN code to the access point.
 - 3) Connect the TV with the access point with **OK**.
 - For **Manual**
 - 1) Press  (yellow).
 - 2) You can set up SSID, security type, encryption type, and encryption key manually.
 - 3) Follow the on-screen instructions and set manually.
 - When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select **AES** for the encryption type.
 - To search access points again
 (blue)
 - To display / hide information of the highlighted access point
INFO
 - It is recommended to select the encrypted access point.
4. Enter the encryption key of the access point with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to set.
- You can set characters using **Numeric buttons**.
- | | | |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
| 0 | | |
- Press **RETURN** to store.
5. **IP/DNS Settings** is displayed.

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** with Δ / ∇ and press **OK** to access.
- 2) Enter the address with $\Delta / \nabla / \triangleleft / \triangleright$ or **Numeric buttons**, and press **OK** to set.



- 3) Press **RETURN** to store.

Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port** with Δ / ∇ .
- 2) Enter the number with **Numeric buttons**.



- 3) Press **RETURN** to store.

-
6. Select **Network Status** with Δ / ∇ and press **OK** to access.

 → **Network > Network settings > Network Status**

7. Select **Exit** with $\triangleleft / \triangleright$ and press **OK** to set.

Custom - Wired

Ensure the connections are completed before starting network setup.

 → **Network > Network connections**

1. Display the menu with **MENU**.
2. Select **Network > Network Connection > Custom > Wired** with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
3. **IP/DNS Settings** is displayed.

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address / Subnet Mask / Default Gateway / DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** with \triangle / ∇ and press **OK** to access.
- 2) Enter the address with \triangle / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- 3) Press **RETURN** to store.

Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port** with \triangle / ∇ .
- 2) Enter the number with **Numeric buttons**.



- 3) Press **RETURN** to store.

-
4. Select **Network Status** with \triangle / ∇ and press **OK** to access.

 \rightarrow **Network > Network settings > Network Status**

5. Select **Exit** with \triangleleft / \triangleright and press **OK** to set.

= Note =

- When the network connection type is set to **Wired**, **Wireless** is deactivated.

Custom - Wireless Access Point

You can use the TV as a wireless access point and connect the network equipment without an access point.

- Confirm the PIN code, network settings of the equipment before starting setup. For details, read the manual of the equipment.
1. Display the menu with **MENU**.
 2. Select [Network](#) > [Network Connection](#) > [Custom](#) > [Wireless Access Point](#) with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.
 3. Select [Connect to device in WPS](#) with \triangle / ∇ and press **OK** to access.
 - To set manually, select [Change settings](#) (see below).
 4. Select and set [WPS\(Push button\)](#) / [WPS\(PIN\)](#) with \triangle / ∇ and press **OK** to access.

[WPS\(Push button\)](#):

Set up the equipment for [WPS\(Push button\)](#). For details, read the manual of the equipment.

[WPS\(PIN\)](#):

Enter the PIN code of the equipment.

- If the connection has failed, check the settings and positions of the equipment. And then, follow the on-screen instructions.


■ Change settings

You can set up [Network name\(SSID\)](#), [Encryption key](#), [Wireless type](#) and [Channel setting method](#) manually.

Follow the on-screen instructions and set manually.

- Set [Reset settings](#) to reset the items of [Change settings](#).

= Note =

- You cannot connect the internet service while the TV is set to [Wireless Access Point](#).
- You can connect up to 7 devices. But the transfer rate will vary according to communication environment or the numbers of connected equipment.
- To confirm the current network settings
 → [Network](#) > [Network settings](#) > [Network Status](#)
- Ensure the equipment to connect supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**.
2. Select **Network** > **Network Status** with Δ / ∇ and press **OK** to access.
3. Automatically testing is done and **Network Status** is displayed.

Try Again:

Performs automatic testing of the network connection for the TV and displays the current status again.

Status Details:

Displays the detailed network status (SSID, security type, encryption type, etc.).

- For more information of the network connection, select **Help**.

my Home Cloud Settings

Displays the terms of service for the cloud services.

1. Display the menu with **MENU**.
2. Select **Network** > **my Home Cloud Settings** > **Notices** with Δ / ∇ and press **OK** to access.
3. Follow the on-screen instructions.

- To set up an account for the cloud services

 → **Functions** > **User profile** > **Settings**

VIERA Name

Sets your favourite name for this TV.

- This name will be used as the name of this TV on the screen of the other network equipment.
- When you use two or more TVs in your network environment, set the names of the TVs for each.

TV Remote App Settings

Sets to control the TV with the equipment (smartphone, etc.) connected to your network.

1. Display the menu with **MENU**.
 2. Select **Network > TV Remote App Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
-

TV Remote

(On / Off)

Enables to control the TV from the network equipment (smartphone, etc.).

Powered On by Apps

(On / Off)

Enables to turn the TV on from the network equipment (smartphone, etc.).

- Depending on the network condition, you may have to turn the TV on with Standby On / Off switch of the TV's remote control.
 - Changing the default configuration may increase Standby Power Consumption.
-

Home Streaming

(Always / Only when powered on)

Enables to share the TV programme and contents of this TV with the network equipment (smartphone, etc.) in the home network.

- Changing the default configuration may increase Standby Power Consumption.
-

Device to upload contents

Selects device to upload contents from the network equipment (smartphone, etc.).

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- You need to install the application for controlling VIERA on your smartphone. For information of the application:
<http://panasonic.net/viera/support> (English only)
For the operations, refer to the support information of the application.
- Depending on the network condition, this function may not be available.
- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

Network Link Settings

Sets to control the TV with devices connected to the network.

1. Display the menu with **MENU**.
 2. Select **Network** > **Network Link Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
DLNA Server / **Registration Type** / **Remote Device List**
 4. Set with Δ / ∇ and press **OK** to store.
-

DLNA Server

(On / Off)

Enables to share the TV programme and contents of this TV with the network equipment (DLNA Certified VIERA, etc.).

- To use this function with another VIERA, select the name of this TV from the DLNA server list of another VIERA, and then select the content to share. Also read the manual of another VIERA.
 - To use this function with your smartphone, you need to install the application for controlling VIERA on your smartphone. For information of the application:
<http://panasonic.net/viera/support> (English only)
For the operations, refer to the support information of the application.
 - Changing the default configuration may increase Standby Power Consumption.
-

Registration Type

(Auto / Manual)

Selects the type to restrict the access to this TV for each piece of equipment on the home network.

Auto:

All available equipment on the home network is accessible (maximum 16 pieces of equipment).

Manual:

Sets the restrictions for each piece of equipment in [Remote Device List](#).

Remote Device List

Lists the equipment accessible to this TV on the home network.

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

TV Anytime Settings

TV Anytime Settings

(On / Off)

Enables to watch TV and set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

- Set [DLNA Server](#) to [On](#) to watch TV from outside the home network.
- Additional information for the services may be found on the following website.

<http://panasonic.net/viera/support> (English only)

- Changing the default configuration may increase Standby Power Consumption.

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition and broadcasts, this function may not be available.

File Sharing Settings

Network Device List

Lists the accessible network devices to play back the contents in Media Player.

 → [Media Player](#) > [Using Media Player](#) > [Network device](#)

Software Update

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**.
2. Select [Network](#) > [Software Update](#) with Δ / ∇ and press **OK** to access.
3. Follow the on-screen instructions.

New Software Message

Selects whether to give a notification message when new software is found via network or not.

1. Display the menu with **MENU**.
2. Select [Network](#) > [New Software Message](#) with Δ / ∇ and press **OK** to access.
3. Select [On](#) / [Off](#) with Δ / ∇ and press **OK** to set.

Photos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with Δ / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file


INFO

= Note =

- Non-playable files are also listed but cannot be selected.


Viewing photo

■ Playback

- To operate Single view
 - ◀ : To the previous photo
 - ▶ : To the next photo
 - ▽ : Stop (return to list)
 - OK : Slideshow
- To display / hide the operation guide
INFO
- To rotate 90°
 (blue)
- To return to list
RETURN

Using Slideshow

Slideshow ends when all photos within the list are viewed.

1. Select the file from the thumbnail of photos for the first view with △ / ▽.
2. Start Slideshow with  (red) and OK.
 - To display / hide the operation guide
INFO
 - To pause (return to Single view)
OK
 - To return to list
RETURN

■ Slideshow Settings

Set up the settings for photo file operations on this TV.

1. Display the option menu with OPTION.
 2. Select [Slideshow Settings](#) with △ / ▽ and press OK to access.
 3. Select one of the following items with △ / ▽ and press OK to access.
[Transition Effect](#) / [Auto Makeup](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
 4. Set with △ / ▽ and press OK to store.
-

Transition Effect

(Off / Fade / Dissolve / Motion / Random)

Selects the transition effect for switching photos during the slideshow.

Fade:

The next photo fades in gradually.

Dissolve:

Each photo is dissolved when switching to the next photo.

Motion:

Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.

Random:

The transition effect is selected at random.

Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

Interval

(Long / Normal / Short)

Selects slideshow interval.

- Not valid when [Transition Effect](#) is set to [Motion](#)
-

Repeat

(On / Off)

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5)

Selects the background music during Photo mode.

Videos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with \triangle / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with \triangle / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.

Watching video

■ Playback

If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

- To operate playback

\triangle : **Manual skip** (if available)



- Press to skip forward approx. 30 seconds.

\triangleleft : Rewind

\triangleright : Fast forward

∇ : Stop

OK : Pause (displays the time seek bar / slow playback) / Playback

- To jump to the specified time point
 - 1) Display the time seek bar with **OK**.
 - 2) While the time seek bar is displayed
 - Press ◀ / ▶ :
 - Search approx. 10 seconds
 - Press and hold ◀ / ▶ :
 - Search rapidly
 - 3) Jump to the specified time point with **OK**.
- To play back slowly
 - 1) Press and hold **OK** for 5 seconds.
 - Press ◀ / ▶ :
 - Search slowly
 - 2) Return to the normal playback with **OK**.
- To display / hide the operation guide and information banner
INFO
- To the previous content
 (red)
- To the next content
 (green)
- To change aspect
 - 1) Display **Aspect Selection** with **ASPECT**.
 - 2) Select the mode with ▲ / ▼ and press **OK** to set.
 - Aspect1:**
Displays the content enlarged without distortion.
 - Aspect2:**
Displays the content full-screen.
 - Original:**
Displays the content original size.
 - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
 - Aspect cannot be changed depending on the content.
- To return to list
RETURN

Video Setup

Set up the settings for video file operations on this TV.

1. Display the option menu with **OPTION**.
 2. Select **Video Setup** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Video Preview / **Audio Selection** / **Dual Audio** / **Dual Mono Audio** / **Subtitle** / **Subtitle Text** / **Repeat**
 - Menu items and selectable options vary depending on the content.
 4. Set with Δ / ∇ and press **OK** to store.
-

Video Preview

(On / Off)

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview **Off** to solve this.
-

Audio Selection, Dual Audio, Dual Mono Audio

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the selected file

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status

 → Network > Videos > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

= Note =

- During the operation, audio signal is output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. To use HDMI2 with ARC function, connect an amplifier that has ARC function and set to use theatre speakers.

 → Functions > VIERA Link "HDAVI Control™"

Music

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with \triangle / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server

INFO

4. Select the file with \triangle / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file

INFO

= Note =

- Non-playable files are also listed but cannot be selected.

Playing music

■ Playback

- To operate playback
 - \triangleleft : Rewind
 - \triangleright : Fast forward
 - ∇ : Stop
 - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
 - 1) Display the time seek bar with **OK**.

2) While the time seek bar is displayed

Press ◀ / ▶ :

Search approx. 10 seconds

Press and hold ◀ / ▶ :

Search rapidly

3) Jump to the specified time point with **OK**.

- To display / hide the operation guide

INFO

- To the previous track

 (red)

- To the next track

 (green)

- To return to list

RETURN

Music Setup

Set up the settings for music file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select **Music Setup** > **Repeat** with **OK**.
3. Select **Off** / **Folder** / **One** with ▲ / ▼ and press **OK** to set.

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

DIGA Recorder

Controlling DIGA Recorder

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **DIGA** with Δ / ∇ and press **OK** to access.
4. The screen of the DIGA Recorder will be displayed. You can control the functions of the DIGA Recorder with this TV's remote control according to the operation guide.

(Example)



- Before operating, register this TV on the DIGA Recorder.
- For details, read the manual of the DIGA Recorder.

Technical information

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

- SD-Video (.mod)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

- AVCHD (.mts)

Video codec:

H.264 BP/MP/HP

Audio codec:

Dolby Digital

- AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-

- AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA, WMA Pro

- Some subtitles or chapter functions may not be available.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3, Vorbis

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, LPCM, MPEG Audio

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio

■ Supported Subtitles formats

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
 - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

Music format

■ Supported Music formats

- MP3 (.mp3)

- AAC / Apple Lossless (.m4a)
 - Copy-protected files cannot be played back.

- FLAC (.flac)

- WMA / WMA Pro (.wma)
 - Copy-protected files cannot be played back.
 - WMA Lossless is not supported.

- LPCM (.wav)

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Functions

User profile

Information

Setting user profile allows you to enjoy the recommended contents, your favourite Home Screen, cloud services, etc.

- To use [my Stream](#)

 → [Functions](#) > [User profile](#) > [my Stream](#)

= Note =

- You need a broadband network environment to use this function fully.

Settings

You can create and edit a user profile.

■ To edit a user profile

1. Display the main menu with **MENU**.
2. Select [Setup](#) > [User Settings](#) with \triangle / ∇ and press **OK** to access.
3. Select a user with $\triangleleft / \triangleright$ and press **OK** to access.
 - To create a new user, select [Create new user](#).
4. Select one of the following items with \triangle / ∇ and press **OK** to access.
([Your icon](#) / [Your name](#) / [Your voice](#) / [Your face](#) / [Main Home Screen](#) / [my Home Cloud account](#))
5. Follow the on-screen instructions.

[Your icon](#)

Sets your favourite user icon.

[Your name](#)

Sets the name of the user.

[Your voice](#)

Registers the voice data of the user for Voice Print Recognition.

Your face

Registers the face data of the user for Face Recognition.

Main Home Screen

Selects Home Screen to be displayed when using Voice Control function. To use this function, you need to register your voice data or face data.

my Home Cloud account

Sets up an account for the cloud services.

■ To delete a user profile

1. Display the main menu with **MENU**.
2. Select **Setup > User Settings** with Δ / ∇ and press **OK** to access.
3. Select a user with $\triangleleft / \triangleright$ and press **OK** to access.
4. Select **Remove this user** with Δ / ∇ and press **OK** to access.
5. When the confirmation screen is displayed, select **Yes** with $\triangleleft / \triangleright$ and press **OK** to set.

= Note =

- You need a broadband network environment to use this function fully.

 → Network > Network connections

 → Network > Network settings

my Stream

Automatically provides the recommended contents (TV programmes, internet content, etc.).

1. Display APPS List with **APPS**.
2. Select **my Stream** with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
3. Follow the on-screen instructions.

- To register a content as your favourite

 → Functions > Touch Pad Controller > My button

= Note =

- You need a broadband network environment to use this function fully.

■ Face Recognition / Voice Print Recognition

By using the Communication Camera and Voice Control function, this TV recognises your face / voice and provides the recommended contents.

- Say “my Stream” into the microphone of the Touch Pad Controller to use this function.
- To use this function, you need to set up a user profile and register face / voice data, etc.

 → [Functions > User profile > Settings](#)

- Communication Camera is not included. Please purchase as necessary.

 → [Support > Optional accessories > Communication Camera](#)

- For details of Voice Control function

 → [Functions > Voice Control](#)

Voice Control

Preparations

Voice Control function allows you to operate the TV (e.g. selecting a channel), search the content from various features, etc. with your speech.

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- Ensure the pairing of Touch Pad Controller is completed.

 → Functions > Touch Pad Controller > Settings

■ Voice Control Settings

1. Display the menu with **MENU**.
2. Select **Setup > Voice Control Settings > Speech Detection Level / Terms of Service** with **△ / ▽** and press **OK** to access.
3. Set with **△ / ▽** and press **OK** to store.

Speech Detection Level

(High / Standard)

Adjusts the sensitivity to recognise your speech.

Terms of Service

Displays the terms of service.

= Note =

- To use Voice Control function fully, you need a broadband network environment, because this function accesses the speech recognition server with the internet connection. Even if you have the internet environment, this function may not be available depending on the proxy settings. Please connect the internet without proxy settings. (Proxy settings are not required for normal household use. For details of internet environment, consult your Internet Service Provider (ISP) or telecommunications company.)

How to use

1. Press **HOME** of Touch Pad Controller.
 - When the confirmation screen is displayed, read carefully and start Voice Control function.
2. The operation guide is displayed and follow the on-screen instructions.
 - To display voice command list
OPTION
 - To exit Voice Control function
RETURN

= Note =

- When you start Voice Control function, sound level of the TV becomes low.
- Voice Control function may not work properly in the following conditions.
 - Not pronounce clearly and correctly
 - Volume level of your voice is too loud or too low.
 - Surrounded by the noise
- Phrases other than Voice Command may not be recognised.
- It is recommended to speak within about 15 cm from the integrated microphone of Touch Pad Controller when using Voice Control function.
- Voice Control function is subject to change without notice.


Touch Pad Controller


Information

Touch Pad Controller is designed for the convenient operations, especially, on Home Screen or internet contents. You can operate the TV intuitively with this controller.

- Touch Pad Controller can be used by registering to this TV with Bluetooth wireless technology.
- After registering, you can operate the TV without pointing this controller at the TV (except Standby On / Off switch).
- To use Standby On / Off switch, point the controller directly at the TV's remote control signal receiver because it works with the infrared. (You can operate the switch without registration.)
- It is recommended to speak within about 15 cm from microphone of Touch Pad Controller when using Voice Control function.

My button

Press  (my button) of Touch Pad Controller while watching media content in [my Stream](#) and you can register the content as your favourite.

-  (my button) may be used while watching media content in other applications as well as [my Stream](#).
- Your registered favourites are reflected on [my Stream](#).

 → [Functions](#) > [User profile](#) > [my Stream](#)

- To select the user, set [User Settings](#).

 → [Functions](#) > [User profile](#) > [Settings](#)

Settings

1. Display the menu with **MENU**.
 2. Select **Setup > VIERA Touch Pad Controller** with \triangle / ∇ and press **OK** to access.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Pairing](#) / [Cursor Settings](#) / [Operation Guide](#)
 4. Follow the on-screen instructions.
-

Pairing

Registers Touch Pad Controller (supplied) to this TV.

- Only 1 Touch Pad Controller can be registered.
-

Cursor Settings

Sets for the cursor of Touch Pad Controller.

Operation Guide

Displays the operation guide of Touch Pad Controller.

VIERA Link “HDAVI Control™”

Summary of VIERA Link

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control™” function.


VIERA Link (HDAVI Control) connects the TV and the equipment with VIERA Link function, and enables easy control, playback, energy saving, creating home theatre, etc. without complicated settings. Connections to the equipment (DVD Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cables allow you to interface them automatically. These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- This TV supports “HDAVI Control 5” function.
- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control” is a unique function that we have developed and added based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control). As such, its operation with other manufacturers’ product that supports HDMI CEC cannot be guaranteed.
- VIERA Link features may be available even with other manufacturers’ equipment supporting HDMI CEC.
- Please refer to individual manuals for other manufacturers’ product supporting VIERA Link function.
- About applicable Panasonic product, consult your local Panasonic dealer.

■ VIERA Link (HDMI connection)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.

About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

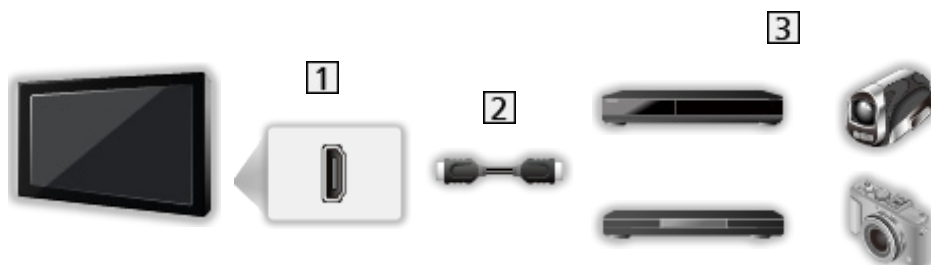

1 HDMI terminal

2 HDMI cable

3 Equipment with VIERA Link function (DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera)

■ Available features (HDMI connection)

DIGA Recorder / DVD Player / Blu-ray Disc Player

- Easy playback
 - Power on Link
 - Power off Link
 - Standby Power Save*²
 - Intelligent Auto Standby*²
 - VIERA Link Control*¹
-

HD Video Camera / LUMIX Camera


- Easy playback
 - Power on Link
 - Power off Link
 - VIERA Link Control*¹
-

*¹ : For equipment which has "HDAVI Control 2 or later" function.

*² : For equipment which has "HDAVI Control 4 or later" function.

■ VIERA Link (HDMI and Audio out connections)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.
- Use the optical digital audio cable for audio output from the TV.

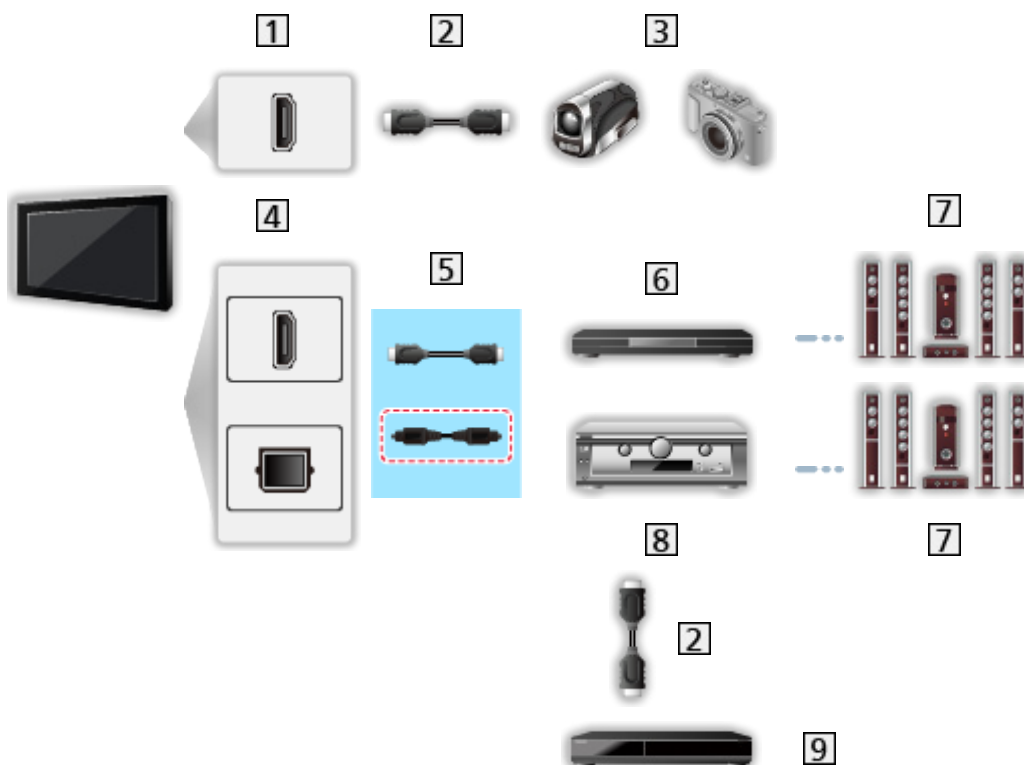

1 HDMI terminal

2 HDMI cable

3 HD Video Camera / LUMIX Camera with VIERA Link function

4 HDMI terminal / DIGITAL AUDIO OUT

5 HDMI cable (Optical digital audio cable*)

6 Player theatre / Blu-ray Disc theatre with VIERA Link function

7 Speaker system

8 Amplifier with VIERA Link function

9 DIGA Recorder with VIERA Link function

*: If the connected equipment has "HDAVI Control 5" function, you do not have to use this audio cable (Optical digital audio cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

■ Available features (HDMI and Audio out connections)

Player theatre

- Easy playback*³
 - Power on Link
 - Power off Link
 - Intelligent Auto Standby*^{2*4}
 - VIERA Link Control*¹
 - Speaker Selection
-

Blu-ray Disc theatre

- Easy playback*³
 - Power on Link
 - Power off Link
 - Standby Power Save*²
 - Intelligent Auto Standby*^{2*4}
 - VIERA Link Control*¹
 - Speaker Selection
-

Amplifier

- Power off Link
 - Intelligent Auto Standby*²
 - Speaker Selection
-

*1 : For equipment which has “HDAVI Control 2 or later” function.

*2 : For equipment which has “HDAVI Control 4 or later” function.

*3 : While playing a disc

*4 : Except for watching a disc

■ VIERA Link Control of compatible equipment



The following is the maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.

For example, DIGA Recorder connected to Amplifier which is connected to the TV via an HDMI cable.

 → [Functions > VIERA Link "HDAVI Control™" > VIERA Link Control](#)

- Recorder:
 - Maximum 3 (DIGA Recorder, etc.)
- Player:
 - Maximum 3 (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)
- Audio system:
 - Maximum 1 (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)
- Tuner:
 - Maximum 4 (Set top box, etc.)

Preparations

- Connect the equipment supporting VIERA Link.
- For VIERA Link connections
 -  → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Use a fully wired HDMI compliant cable.
- Set up the connected equipment. Read the manual of the equipment.
- Set [VIERA Link](#) to [On](#) in the Setup Menu.
- Set up the TV. After connection, turn the equipment on and then switch the TV on. Select the HDMI input from [Input Selection](#) with  and make sure that an image is displayed correctly. (This setup should be done each time the following conditions occur.)
 - First time operation
 - Adding or reconnecting equipment
 - Changing setup

Easy playback

Automatic input switching - When the connected equipment is operating, the input mode is switched automatically.

Power on Link

Set [Power on Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the connected equipment starts playback or direct navigator / function menu for the equipment is activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

Power off Link

Set [Power off Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

Standby Power Save

Set [Standby Power Save](#) to [On](#) in [VIERA Link Settings](#) to use this function.

The power consumption of the connected equipment in Standby mode is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to start the connected equipment fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link](#) is set to [On](#).

Intelligent Auto Standby

Set [Intelligent Auto Standby](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is on, non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when [Speaker Selection](#) is changed to [TV](#) (except for watching a disc).

- This function may not work properly depending on the connected equipment. In this case, set to [Off](#).

VIERA Link Control

You can control some functions of the connected equipment with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **VIERA Link Control** with Δ / ∇ and press **OK** to access.
4. Select one of the following items with Δ / ∇ and press **OK** to access.

Recorder / Player / Home Cinema / Video Camera / LUMIX / Digital Camera / Other

(The menu of the accessed equipment will be displayed. The input mode will be changed automatically.)

- The displayed item may vary depending on the connected equipment.
 - **Home Cinema** means Player theatre, Blu-ray Disc theatre or Recorder theatre.
 - **Other** means Tuner set top box.
5. Follow the on-screen instructions to operate the menu of the equipment.

- Confirm the remote control code is "73".

 → **Watching > External equipment > Operating with TV's remote control**

- To display the operation guide

OPTION

(If other manufacturers' product is accessed, Setup / Contents Selection menu may be displayed.)

- Available TV's remote control buttons depend on the connected equipment.

■ If multiple recorders or players are connected

Each recorder / player is numbered. The number is given from the TV's lower number of HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as **Recorder1**, and the recorder connected to HDMI3 is displayed as **Recorder2**.

■ If you access non-VIERA Link equipment

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use the remote control of the connected equipment.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment. In this case, use the remote control of the connected equipment.
- For details of the operations for the connected equipment, read the manual of the equipment.

Speaker Selection

You can control the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **Speaker Selection** with Δ / ∇ and press **OK** to access.
4. Select **Home Cinema / TV** with Δ / ∇ and press **OK** to set.

Home Cinema:

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use **Volume Up / Down** and **MUTE**.



TV:

TV speakers are active.

■ Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with an HDMI cable and Optical digital audio cable, and then select [Home Cinema](#). If your Amplifier has the “HDAVI Control 5” function, you only need to connect it with an HDMI cable to the TV’s HDMI2 terminal.

To enjoy multi-channel sound from DIGA Recorder, connect an HDMI cable from the DIGA Recorder to the Amplifier.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link “HDAVI Control™” > Summary of VIERA Link](#)

Note

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be delivered for the first few seconds when the input mode is switched.
- “HDAVI Control 5” is the newest standard for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm the HDAVI Control version of this TV

 → [Support > Information > Using Help menu](#)





Child Lock

Using Child Lock

You can lock specific channels / AV input terminals to restrict access to them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1. Display the menu with **MENU**.
2. Select **Setup** > **Child Lock** with Δ / ∇ and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- Make a note of the PIN number in case you forget it.
 - “0000” has been stored as the default PIN number.
4. Select **Child Lock List** with Δ / ∇ and press **OK** to access.
 5. Select the channel / input with Δ / ∇ and press **OK** to lock.
 -  appears when the channel / input is locked.
 - To cancel
 - 1) Select the locked channel / input with Δ / ∇ .
 - 2) Press **OK**.
 - To lock all
 -  (green)
 - To cancel all locks
 -  (yellow)
 - To jump to the head of the next channel / input group
 -  (blue)

PIN number

You can change the PIN number.

1. Select **Change PIN** with Δ / ∇ and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



= Note =

- Setting **Shipping Condition** erases the PIN number and all settings.
- If you have forgotten your changed PIN, input “6969” as the PIN number.

Parental Rating

To watch the Digital TV programme that has rating information on the selected age, enter the PIN number (depending on the broadcaster).

1. Select **Parental Rating** with Δ / ∇ and press **OK** to access.
2. Select an age for the restriction of programmes with Δ / ∇ and press **OK** to set.

■ Meaning of rating

No Block: Not classified

R: Restricted 18+

AV 15+: Adult strong Violence 15+

MA 15+: Mature Adult 15+

M: Mature

PG: Parental Guidance recommended

G: General

C: Children

P: Pre school


= Note =

- Setting **Shipping Condition** erases the PIN number and all settings.
- If you have forgotten your changed PIN, input "6969" as the PIN number.

Data Service Application

Using Data Service Application

You can enjoy Hybrid Broadcast Broadband TV application that is one of the interactive data services for digital broadcasting.

1. Select Digital TV with **TV**.
2. Display the menu with **MENU**.
3. Select **Setup** > **Data Service Application** > **Service** with Δ / ∇ and press **OK** to access.
4. Select **Auto Start On** with Δ / ∇ and press **OK** to set.
 - A notification message will appear when the application is available. Follow the on-screen instructions.
 - **D** is displayed on the information banner if the programme has Hybrid Broadcast Broadband TV application.
 → **Watching** > **Basic** > **Information banner**
 - To stop the application
EXIT

Cookie

1. Display the menu with **MENU**.
2. Select **Setup** > **Data Service Application** > **Store Cookie** / **Delete Cookie** with Δ / ∇ and press **OK** to access.

Store Cookie

(On / Off)

Enables to store the technical information that a data service application leaves into the TV in order to recognise to use it again.

Delete Cookie

Deletes all of technical information left by a data service application.

Note

- To use Hybrid Broadcast Broadband TV application fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- Not all the data services are available depending on the area and broadcaster.
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- Operations may vary depending on the broadcaster. Follow the on-screen instructions.
- On-screen instructions may not correspond to the remote control buttons.

Shipping Condition


Shipping Condition

Resets the TV to its original condition (i.e. no channels tuned in).

All settings other than [USB Device Setup](#) are reset (channels, picture, sound settings, etc.).

1. Display the menu with **MENU**.
2. Select [Setup](#) > [System Menu](#) > [Shipping Condition](#) with \triangle / ∇ and press **OK** to access.
3. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.
4. Follow the on-screen instructions.
 - [Auto Tuning](#) will automatically start.

= Note =

- To retune TV channels only (e.g. after moving house), set [Auto Tuning](#).
 → [Watching > Tuning and editing channels > Auto Tuning](#)

Updating the TV Software

Information

A new version of software may be released for download to enhance the performance or operations of the TV.

If there is an update available and the channel has the update information, a notification message is displayed.

- To download

OK

- Press **EXIT** when not downloading.

Auto update

You can update new software automatically.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > Auto Update Search in Standby** with Δ / ∇ and press **OK** to access.
3. Select **Immediately / 1 hour after / Off** with Δ / ∇ and press **OK** to set.
 - If System Update is performed, the software will be updated (TV functions may be changed). If you do not want to do so, set **Auto Update Search in Standby** to **Off**.
 - Every time you set, the TV automatically performs search in Standby and downloads an update if any software updates are available.
 - The automatic updating cannot be performed under the following conditions:
 - TV turned off with Mains Power On / Off switch
 - Recording is in progress.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT switch off the TV.
- A notification message may be a reminder. In this case, schedule information (the date when the new version can be used) will appear. You can set the reservation for update. The update will not start when the TV is off.

Manual update

You can update new software manually.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > System Update Search Now** with **△ / ▽** and press **OK** to access.
3. Searches for an update (for several minutes) and displays a corresponding message if any.
4. Download with **OK**.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT switch off the TV.
- To update via the internet

 → **Network > Network settings > Software Update**

Setting characters

Using Numeric buttons

You can enter characters for free input items using **Numeric buttons**.

Press **Numeric buttons** repeatedly until you reach the desired character.

1 : . @ / 1 ! : # + - * _ () " ' % & ? , ; = \$ [] ~ < > { } | ` ^ \

2 : a b c 2 A B C

3 : d e f 3 D E F

4 : g h i 4 G H I

5 : j k l 5 J K L

6 : m n o 6 M N O

7 : p q r s 7 P Q R S

8 : t u v 8 T U V

9 : w x y z 9 W X Y Z

0 : Space 0

- The character is set automatically if you leave for 1 second.
- You can also set the character pressing **OK** or other **Numeric buttons** less than 1 second.
- The characters may vary depending on the input items.

Bluetooth devices

Bluetooth Setup

You can use Bluetooth keyboards*¹ / mouse*¹ / Bluetooth audio devices*² (headphones, etc.) with this TV by setting **Bluetooth Setup** in the Setup Menu.

*¹ : HID (Human Interface Device Profile) compliant keyboards / mouse can be used.

*² : A2DP (Advanced Audio Distribution Profile) compliant audio devices can be used.

- Additional information for the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

1. Display the menu with **MENU**.
 2. Select **Setup** > **Bluetooth Setup** with **△** / **▽** and press **OK** to access.
 3. Select **Devices** / **Bluetooth Audio Settings** with **△** / **▽** and press **OK** to access.
-

Devices

Searches the available device and displays the status.

- You cannot use two or more A2DP compliant audio devices simultaneously.

Not paired:

The device is not registered. Register the device by following the on-screen instructions to use with this TV.

Connected:

The device is registered and you can use with this TV.

Not connected:

The device is already registered, but not connected to this TV. Check the device is turned on and set within the available range.

Bluetooth Audio Settings

Adjusts the delay time and volume for the audio device.

Lip Sync / Lip Sync Adjustment:

If the sound of the audio device does not synchronise the image, set **Lip Sync** to **On** and adjust in **Lip Sync Adjustment**.

- This function is available only for the Bluetooth audio devices.

Audio Output:

Set to **Bluetooth only** to mute the TV speakers automatically when using the Bluetooth audio device. And you can adjust the volume of the device using **Volume Up / Down**.

Volume:

Adjusts the volume of the Bluetooth audio device.

-
- Settings in the Sound Menu may not be effective for the Bluetooth audio devices.
 - This setup has not been designed for Touch Pad Controller supporting Bluetooth wireless technology.

Keyboard

Keyboard

- Keyboards requiring the drivers are not supported.
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard.
- Some of the keys of keyboards may correspond to the operation of the remote control.




Keyboard	Remote Control
↑ / ↓ / ← / →	△ / ▽ / ◀ / ▶
Enter	OK
Backspace	RETURN
Esc	EXIT
0 - 9 / Character	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	AV
F5 / F6	Channel Down / Up
F7 / F8	Volume Down / Up
F9 / F10 / F11 / F12	Coloured buttons

Settings

Setting menu

How to use

Various menus allow you to make settings for the picture, sound, and other functions.

1. Display the menu with **MENU**.
 - Displayed items vary depending on the input signal.
 2. Select the menu with \triangle / ∇ and press **OK** to access.
 3. Select the items with \triangle / ∇ and press **OK** to access.
 - Only available items can be selected.
 - You can also access from **eHELP** pressing  (red) at each item (if available).
-
- You can select from among alternatives with \triangle / ∇ and press **OK** to set.
 - You can adjust using the slide bar with $\triangleleft / \triangleright$ and press **OK** to set.
 - You can go to the next screen with **OK**.
 - You can enter names or numbers freely for some items.
 - 1) Enter characters one by one with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to set.
 - You can set characters using **Numeric buttons**.
 → [Functions > Setting characters > Using Numeric buttons](#)
 - 2) Press **RETURN** to store.
 - To reset the settings
 - To initialise picture or sound settings only, select [Reset Picture Defaults](#) in the Picture Menu or [Reset Sound Defaults](#) in the Sound Menu.
 - To initialise all settings, select [Shipping Condition](#).
 → [Functions > Shipping Condition](#)
 - To exit the menu screen
EXIT
 - To return to the previous screen
RETURN

- To change menu pages



- To change the colour type of on-screen displays, set [OSD Colour](#).

 
 → [my Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)

= Note =

- Menu items and selectable options vary depending on the mode (TV mode, Media Player, Network services, etc.).

■ Using control panel buttons

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Select and set with following control panel buttons.
 - Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button.

Picture

Viewing Mode

Selects your favourite picture mode for each input.

([Dynamic](#) / [Normal](#) / [Cinema](#) / [True Cinema](#) / [Custom](#))

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

Basic settings

[Backlight](#), [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#)

Adjusts the levels of these options according to your personal preference.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Vivid Colour

([On](#) / [Off](#))

Automatically adjusts colours to vivid ones.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Intelligent Frame Creation

([Max](#) / [Mid](#) / [Min](#) / [Off](#))

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- Depending on the contents, images may be noisy. To prevent the noise, change the setting.
 - Not valid for photo contents of Media Player / Network services or when [Game Mode](#) is set to [On](#)
-

24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

 → Watching > For best picture > Basic settings

- This function is available only for 24p signal input and displayed instead of [Intelligent Frame Creation](#).
- Not valid for photo contents of Media Player / Network services or when [Game Mode](#) is set to [On](#)

Ambient Sensor

Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

(On / Off)

 → Watching > For best picture > Ambient Sensor

Noise reduction settings

Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

 → Watching > For best picture > Noise reduction settings

MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

 → Watching > For best picture > Noise reduction settings

Advanced Settings

You can adjust and set up the detailed picture settings.

 → Watching > For best picture > Advanced Settings

This function is available when [Viewing Mode](#) is set to [Cinema](#), [True Cinema](#) or [Custom](#).

Option Settings

Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

 → Watching > For best picture > Option Settings

- Not valid in TV mode
-

Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

 → Watching > For best picture > Option Settings

- This function is available for interlaced signals (except in Network services or when **Game Mode** is set to **On**).
-

1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI) input signal.

 → Watching > For best picture > Option Settings

- Not valid in 3D mode
-

HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

 → Watching > For best picture > Option Settings

- For HDMI input
-

HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

 → Watching > For best picture > Option Settings

- For HDMI input
-

3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

 → Watching > For best picture > Option Settings

- For PAL / NTSC signal reception in TV mode or from composite connection

Screen Settings

16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

 → Watching > For best picture > Screen Settings

- Not valid in Network services
-

H-Size

(H-Size1 / H-Size2)

Switches the horizontal display range to reduce noise on the side edge of the image.

 → Watching > For best picture > Screen Settings

- For TV mode, AV and HDMI input
 - Not valid in 3D mode
-

Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Just](#), [Sidecut Just](#), [Zoom](#) or [Sidecut Zoom](#).

 → Watching > For best picture > Screen Settings

Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

 → Watching > For best picture > Screen Settings

3D Settings

3D Detection

(On (Advance) / On / Off)

Selects whether to switch to the 3D mode automatically or not.

 → Watching > 3D > 3D Settings

3D Signal Message

(On / Off)

Selects whether to give a notification message when a signal of 3D format is found or not.

 → Watching > 3D > 3D Settings

- Not valid when **3D Detection** is set to **On (Advance)**.
 - For Digital TV, Component and HDMI input
-

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

 → Watching > 3D > 3D Settings

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in **2D→3D** mode)

 → Watching > 3D > 3D Settings

L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in **2D→3D** mode).

 → Watching > 3D > 3D Settings

Edge Smoother

(On / Off)

Set to **On** if you feel the contoured parts of an image are not smooth enough (except in **2D→3D** mode).

 → Watching > 3D > 3D Settings

Safety Precautions

Displays the precautions for viewing 3D images.

 → [Watching > 3D > 3D Settings](#)

Copy Adjustment

Copies the selected [True Cinema](#) or [Custom](#) settings to those of the other input.

 → [Watching > For best picture > Copy Adjustment](#)

Reset Picture Defaults


Resets the current Picture Viewing Mode to the default settings.

Sound

Mode

Selects your favourite sound mode for each input.

([Standard](#) / [Music](#) / [Ambience](#) / [User](#))

 → [Watching](#) > [For best audio](#) > [Sound mode](#)

Basic settings

Bass

Adjusts level to enhance or minimise lower, deeper sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Treble

Adjusts level to enhance or minimise sharper, higher sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Equaliser

Adjusts the frequency level to suit your favourite sound quality.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Balance

Adjusts volume level of right and left speakers.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Surround

([Virtual Surround](#) / [Off](#))

Selects surround sound settings.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Bass Boost

([On](#) / [Off](#))

Enhances the effect of bass sounds.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Volume settings

TV Speaker

(On / Off)

Set to **Off** when using the external speakers.

 → [Watching > For best audio > Volume settings](#)

Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

 → [Watching > For best audio > Volume settings](#)

Volume Correction

Adjusts the volume of each individual channel or input mode.

 → [Watching > For best audio > Volume settings](#)

Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

 → [Watching > For best audio > Volume settings](#)

Voice Guidance Settings

Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

 → [Watching > For best audio > Voice Guidance Settings](#)

Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

 → Watching > For best audio > Voice Guidance Settings

User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

 → Watching > For best audio > Voice Guidance Settings

Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network contents in web browser function.

 → Watching > For best audio > Voice Guidance Settings

Audio Description

Audio Description

(Auto / Off)

Narration settings for visually impaired users

 → Watching > For best audio > Audio Description

- For Digital TV
-

Volume

Adjusts the volume for Audio Description.

 → Watching > For best audio > Audio Description

- For Digital TV
-

Speakers

(Mix / Standard)

Set to **Mix** to activate the description sound track from TV speakers.

 → Watching > For best audio > Audio Description

- For Digital TV

Advanced settings

MPX

Selects multiplex sound mode (if available).

 → [Watching > For best audio > Advanced settings](#)

- For Analogue TV
-

Digital Audio Preference

([Dolby D](#) / [MPEG](#))

Selects the initial setting for audio tracks.

 → [Watching > For best audio > Advanced settings](#)

- For Digital TV
-

SPDIF Selection

([Auto](#) / [PCM](#))

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals.

 → [Watching > For best audio > Advanced settings](#)

- For Digital TV or video contents of Media Player / Network services
-

HDMI Input

([Digital](#) / [Analogue](#))

Selects to fit the input signal.

 → [Watching > For best audio > Advanced settings](#)

- For HDMI input
-

Reset Sound Defaults

Resets the current Sound Mode to the default settings.

Network

Network Connection

Sets the network setting to use this TV in your network environment.

 → [Network](#) > [Network settings](#) > [Network Connection](#)

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

 → [Network](#) > [Network settings](#) > [Network Status](#)

my Home Cloud Settings

Notices

Displays the terms of service.

 → [Network](#) > [Network settings](#) > [my Home Cloud Settings](#)

VIERA Name

Sets your favourite name for this TV.

 → [Network](#) > [Network settings](#) > [VIERA Name](#)

TV Remote App Settings

Sets to control the TV from network equipment (smartphone, etc.).

 → [Network](#) > [Network settings](#) > [TV Remote App Settings](#)

Network Link Settings

Sets to control the TV with devices connected to the network.

 → [Network](#) > [Network settings](#) > [Network Link Settings](#)

TV Anytime Settings

Enables to watch TV and set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

 → [Network](#) > [Network settings](#) > [TV Anytime Settings](#)

File Sharing Settings

Network Device List

Lists the accessible network devices to play back the contents in Media Player.

 → [Media Player](#) > [Using Media Player](#) > [Network device](#)

Other settings

Software Update

Checks for available software updates from the Panasonic website.

 → Network > Network settings > Software Update

New Software Message

(On / Off)

Selects whether to give a notification message when new software is found via network or not.

 → Network > Network settings > New Software Message

Timer

Off Timer

Sets the duration of time until the TV automatically goes into Standby mode.

(90 / 75 / 60 / 45 / 30 / 15 / Off (minutes))

 → Watching > Basic > Off Timer

Timer Programming

Sets a timer to record or remind forthcoming programmes.

 → Recording > Timer Programming > Setting Timer Programming

- For Digital TV

Clock Settings

Mode

(Auto / Manual)

Selects the clock setting mode for this TV.

 → Watching > Basic > Adjusting time

Date

Sets the current date manually.

 → Watching > Basic > Adjusting time

Time

Sets the current time manually.

 → Watching > Basic > Adjusting time

Daylight Saving Time

Selects time offset from the standard time for Summer Time.

(Auto / Off / + 1/2 hour / + 1 hour)

 → Watching > Basic > Adjusting time

Region Select

Selects the region where you live to adjust the standard time.

(NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania)

 → Watching > Basic > Adjusting time

Auto Standby

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

(On / Off)

 → Watching > Basic > Energy saving functions

No signal Power off

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

(On / Off)

 → Watching > Basic > Energy saving functions

Setup

Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

 → [Watching](#) > [Basic](#) > [Energy saving functions](#)

Voice Control Settings

Settings for Voice Control function

 → [Functions](#) > [Voice Control](#) > [Preparations](#)

User Settings

Settings for user profile.

 → [Functions](#) > [User profile](#) > [Settings](#)

USB Device Setup

Formats the USB HDD or safely removes USB device.

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

Recording Setup

Settings for the recording feature of the USB HDD

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

VIERA Touch Pad Controller

Pairing

Registers Touch Pad Controller (supplied) to this TV.

 → [Functions](#) > [Touch Pad Controller](#) > [Settings](#)

Cursor Settings

Sets for the cursor of Touch Pad Controller.

 → [Functions](#) > [Touch Pad Controller](#) > [Settings](#)

Operation Guide

Displays the operation guide of Touch Pad Controller.

 → [Functions](#) > [Touch Pad Controller](#) > [Settings](#)

Bluetooth Setup

Settings for the specific devices supporting Bluetooth wireless technology

 → [Functions](#) > [Bluetooth devices](#) > [Bluetooth Setup](#)

Child Lock

Applies access control for channels or inputs to prevent unwanted access.

 → [Functions](#) > [Child Lock](#) > [Using Child Lock](#)

Tuning Menu

Favourites Edit

Creates a list of favourite channels.

 → [Watching](#) > [Tuning and editing channels](#) > [Favourites Edit](#)

- For Digital TV
-

Channel List

Skips unwanted channels or edits channels.

 → [Watching](#) > [Tuning and editing channels](#) > [Channel List](#)

Auto Tuning

Automatically searches for receivable channels.

 → [Watching](#) > [Tuning and editing channels](#) > [Auto Tuning](#)

Manual Tuning

Searches for channels manually.

 → [Watching](#) > [Tuning and editing channels](#) > [Manual Tuning](#)

Update Channel List

Updates the channel list while keeping your settings.

 → [Watching](#) > [Tuning and editing channels](#) > [Update Channel List](#)

- For Digital TV
-

New Channel Message

(On / Off)

Selects whether to give a notification message when a new channel is found or not.

 → [Watching > Tuning and editing channels > New Channel Message](#)

- For Digital TV
-

Signal Condition

Checks the signal condition.

 → [Watching > Tuning and editing channels > Signal Condition](#)

- For Digital TV
-

Add TV Signal

Adds the TV mode.

 → [Watching > Tuning and editing channels > Add TV Signal](#)

= Note =

The settings in [Tuning Menu](#) are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([Digital TV Tuning Menu](#) / [Analogue TV Tuning Menu](#))

Display Settings

OSD Colour

([Jet black](#) / [Pale grey](#) / [Organic brown](#) / [Sand beige](#))

Selects the preferred colour type of on-screen displays.

 → [my Home Screen > my Home Screen > OSD Colour](#)

Teletext

This item is not used for this model.

Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#) or banner.

 → [Watching > External equipment > Watching external input](#)

Banner Display Timeout

(10 / 9 / 8 / 7 / 6 / 5 / 4 / 3 / 2 / 1 / 0 (No display) (seconds))

Sets how long the information banner stays on screen.

 → Watching > Basic > Information banner

Smart Banner

(On / Off)

Displays the introduction banner for the internet service.

 → Watching > Basic > Information banner

Playing Time Display

(On / Off)

Set to **On** to display a time period of continuous use in Game mode on the top right of the screen every 30 minutes.

 → Watching > External equipment > Watching external input

- This function is available when **Game Mode** is set to **On**.

VIERA Link Settings

VIERA Link

(On / Off)

Sets to use VIERA Link functions.

 → Functions > VIERA Link "HDAVI Control™" > Preparations

Power on Link

(On / Off)

Sets to use Power on Link functions.

 → Functions > VIERA Link "HDAVI Control™" > Power on Link

Power off Link

(On / Off)

Sets to use Power off Link functions.

 → Functions > VIERA Link "HDAVI Control™" > Power off Link

Standby Power Save

(On / Off)

Controls the connected equipment to reduce power consumption in Standby.

 → [Functions > VIERA Link "HDAVI Control™" > Standby Power Save](#)

- This function is available when [VIERA Link](#) is set to [On](#) and [Power off Link](#) is set to [On](#).
-

Intelligent Auto Standby

(On / Off)

Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption.

 → [Functions > VIERA Link "HDAVI Control™" > Intelligent Auto Standby](#)

- This function is available when [VIERA Link](#) is set to [On](#).

Data Service Application

Service

(Auto Start On / Auto Start Off / Off)

Sets to use Hybrid Broadcast Broadband TV application.

- Not all the data services are available depending on the area and broadcaster.

 → [Functions > Data Service Application > Using Data Service Application](#)

- For Digital TV
-

Store Cookie

(On / Off)

Sets to store the information from a data service to the TV in order to access again quickly.

 → [Functions > Data Service Application > Cookie](#)

Delete Cookie

Deletes all the information from a data service.

 → [Functions > Data Service Application > Cookie](#)

System Menu

Shipping Condition

Resets all settings to the original condition.

 → [Functions](#) > [Shipping Condition](#) > [Shipping Condition](#)

System Update

Downloads new software to this TV.

 → [Functions](#) > [Updating the TV Software](#) > [Auto update](#)

Licence Menu

Displays the software licence information.

Other Settings

Power Save

(On / Off)

Reduces brightness of the picture to economise on power consumption.

Support

FAQs

Picture


Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.



Black and white picture

- Check that the output of the external equipment matches the input of the TV.
-

Chaotic image, noisy

- Set [Noise Reduction](#) and [MPEG Remaster](#) in the Picture Menu to remove noise.
 → [Watching > For best picture > Noise reduction settings](#)
 - Check nearby electrical equipment (car, motorcycle, fluorescent lamp).
-

No image can be displayed

- Check the correct input mode is selected.
 - Check the setting of [AV \(COMPONENT / VIDEO\)](#) in [Input Selection](#) to match the output of the external equipment.
 → [Watching > External equipment](#)
 - Is [Contrast](#), [Brightness](#) or [Colour](#) in the Picture Menu set to the minimum?
 → [Watching > For best picture > Basic settings](#)
 - Check all required cables and connections are firmly in place.
-

Blurry or distorted image (no sound or low volume)

- Reset channels.

 → [Watching > Tuning and editing channels > Auto Tuning](#)

White spots or shadow images (noise)

- Check the position, direction, and connection of the aerial.
-

There may be red spots, blue spots, green spots and black spots on the screen

- An image on a TV screen is created by many small groups of dots known as pixels (which is similar to the image in a newspaper). It also naturally follows that higher panel resolutions contain more pixels. To create a colour image, each pixel consists of three tiny coloured dots (known as sub-pixels), one each of red, green and blue. Each one of these dots is precisely controlled by the electronics of the TV to produce the picture. Whilst Panasonic maintains the highest standards in manufacturing technology and processes in the construction of these panels, there are a number of allowable pixel / subpixel failures that still allow the panel to be defined as a good panel. It is not possible to guarantee absolutely no pixel loss.
-

[Shop](#) appears on screen at switch on

- [Shop](#) was selected in first time Auto Tuning when the TV is turned on for the first time. Reset settings in [Shipping Condition](#), then select [Home](#) in first time Auto Tuning.

 → [Functions > Shipping Condition > Shipping Condition](#)

Digital TV

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Connecting devices such as DTV recorder / PVR / VCR, etc. that also require an antenna connection to the digital television

- To maintain optimum antenna signal quality, use an 'F' type TV signal splitter when connecting two or more devices to the same antenna socket.

Hint: Some degradation of the DTV signal may occur if you are connecting the aerial through an external device (e.g. DVD Recorder or Set Top Box). In this case it is better to use a splitter and connect the aerial directly to both devices.

After digital TV tuning, (or re-tuning) some or all DTV channels are missing

- Check to ensure your area is covered by DTV transmissions.
 - Check that the aerial and antenna cable are designed for DTV reception. If you live within 5-10 km of DTV transmission towers, a combined VHF / UHF Digital TV aerial should be adequate. Outside this area, separate VHF and UHF aerials provide superior reception performance.
 - If you live in a unit or apartment, check to ensure the Master Antenna TV (MATV) system is designed for analogue and DTV reception. Please consult your body corporate.
-

Picture infrequently pixelates on some or all channels

- Electrical interference caused by local or distant lightning storms, heavy rain, high wind, etc. may cause picture to break up and / or audio to mute / distort momentarily.
 - Impulse noise interference from an infrequently used electrical appliance, or a passing vehicle or lawn mower with a "noisy" ignition system.
 - Older style antenna cabling, loose fitting/corroded wall socket connections / terminals, etc.
-

Picture regularly pixelates on some channels, or **No signal** message

- Check **Signal Condition** via TV Setup menu. If the level of **Signal Quality** or **Signal Strength** is not high or constantly changing, check aerial / cable connections. If the problem persists, consult your local TV antenna installer.
- Too much signal; is **Signal Strength** always at full strength? If yes, try attenuating (reducing) the signal strength.
- Check that the aerial and antenna cable are designed for DTV reception.
- The received signal may be too weak to allow the TV to reliably lock to the selected channel to generate a viewable picture. If the problem persists, consult your local TV aerial installer.
- Interference from household appliances (known as impulse noise) such as light switches, fridges, etc. may cause picture break up and / or audio distortion. Use high quality quad shielded coaxial cable (RG6Q) fly lead between TV and antenna wall socket to minimise impulse noise pickup. If the problem persists, consult your local TV aerial installer.
- Antenna installation may be using an aerial amplifier that is faulty or an older style aerial amplifier that was not designed for digital TV.
- Older style antenna cabling, loose fitting / corroded wall socket connections / terminals, etc.
- Turn the TV off with Mains Power On / Off switch, then turn it on again.

= Note =

Digital TV reception is only as good as the antenna and the antenna cabling delivering the DTV signals to the television. Reliable digital TV reception requires high quality, robust DTV signals which can only be achieved when using a TV antenna and cabling designed for digital TV reception.

- For further reading, please visit at the following website where you can download 'The Digital TV Antenna Systems for Homes Handbook' information PDF file:

<http://www.digitalready.gov.au/publications.aspx>




- For your safety, the antenna and cabling should be inspected / installed by a licensed installer that should comply with Australian Standard AS1417.1 for Domestic installations or AS1367 for MATV installations.

Sound


Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

No sound is produced

- Is “Sound mute” active? Press **MUTE** to switch sound mute on or off.
 - Is the volume set to the minimum?
 - Check connections and setting of external equipment.
 → [Watching > External equipment](#)
 - Ensure that **Speaker Selection** is set to **TV**.
 → [Functions > VIERA Link “HDAVI Control™” > Speaker Selection](#)
 - Ensure that **TV Speaker** is set to **On**.
 → [Watching > For best audio > Volume settings](#)
-

Sound level is low or sound is distorted



- Sound signal reception may be poor.
- Set **MPX** in the Sound Menu to **Mono**. (Analogue TV)
 → [Watching > For best audio > Advanced settings](#)

3D

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Cannot view 3D images

- Ensure that **3D Mode Selection** is set to **3D**.
 → [Watching > 3D > 3D Mode Selection](#)
- Some 3D image signals may not be automatically recognised as 3D images. Set **3D Mode Selection (Manual)** to match the picture format.
 → [Watching > 3D > Viewing 3D](#)

- For some people, the 3D images may be difficult to see, or cannot be seen, especially among users who have a different level of eyesight between the left and right eyes. Take necessary measures (wearing glasses, etc.) to correct your eyesight before use.
-

There is something wrong with the 3D images

- Check the setting of [L/R Picture Swap](#) or [Edge Smoother](#).

 → [Watching > 3D > 3D Settings](#)

HDMI

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Sound is unusual

- Set the sound setting of the connected equipment to “2ch L.PCM”.
- Check the [HDMI Input](#) setting in the Sound Menu.

 → [Watching > For best audio > Advanced settings](#)

- If digital sound connection has a problem, select analogue sound connection.

 → [Watching > External equipment > HDMI features](#)

Pictures from external equipment are unusual when the equipment is connected via HDMI

- Check the HDMI cable is connected properly.

 → [Watching > External equipment > External connection](#)

- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment.

 → [Watching > External equipment > Valid input signals](#)






- Use equipment compliant with EIA/CEA-861/861D.

Network




Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.



Cannot connect to the network

- Check the LAN cable or wireless LAN is connected properly.
 → [Network > Network connections](#)
 - Check the connections and settings.
 → [Network > Network connections](#)
 → [Network > Network settings](#)
 - Check the network equipment and network environment.
 - The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually.
 → [Network > Network settings](#)
 - The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV and set the router to use it.
 → [Network > Network settings > Network Status](#)
 - If the problem persists, consult your Internet Service Provider or telecommunications company.
-

Cannot select the file during DLNA operations

- Is media server of the connected equipment prepared?
 → [Network > DLNA > Information](#)
 - Check applicable data format.
 → [Network > Technical information](#)
 - Check the settings of [Network Link Settings](#).
 → [Network > Network settings > Network Link Settings](#)
-

Cannot operate internet content



- Check the connections and settings.
 -  → [Network > Network connections > Internet connection](#)
 -  → [Network > Network settings](#)
- The server or connected line may be busy now.

Other

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

VIERA Link function does not work and an error message appears

- Check the connections.
 -  → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
 - Turn the connected equipment on and then switch the TV on.
 -  → [Functions > VIERA Link "HDAVI Control™"](#)
-

Parts of the TV become hot

- Even if the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.
-

Overcurrent error message appears

- The connected USB device may cause this error. Remove the device and turn the TV off with Mains Power On / Off switch, then turn it on again.
 - Check foreign objects are not inside the USB port.
-

An error message appears

- Follow the message's instructions.
 - If the problem persists, contact your local Panasonic dealer or the authorised service centre.
-

Touch Pad Controller does not work or cannot be registered

- Are the batteries installed correctly?
- The batteries may be running low. Replace them with new ones.
- Register again.

 → [Functions > Touch Pad Controller > Settings](#)

- Use Touch Pad Controller within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the controller, or the surrounding environment.)
-

Voice Control function does not work

- Voice Control function may not work properly depending on the pronunciation, noise and network environment.
- For details

 → [Functions > Voice Control](#)

The display panel moves slightly and clattered sound is heard when it is pushed with a finger

- There is a little gap around the panel to prevent damage to the panel. This is not a malfunction.

Maintenance

Care and Cleaning

First, remove the mains plug from the socket outlet.

■ Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surfaces of the display panel, cabinet, or pedestal using a soft cloth to clean the dirt or fingerprints.

For stubborn dirt:

- (1) First clean the dust on the surface.
- (2) Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).
- (3) Wring the cloth firmly. (Please note liquids do not enter the TV inside. May lead to product failure.)
- (4) Finally, wipe away all the moisture.

= Caution =

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

■ Mains plug

- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

Information

Using Help menu

1. Display the menu with **MENU**.
 2. Select **Help** with Δ / ∇ and press **OK** to access.
 3. Select **TV Self Test** / **System Information** / **Device Information** with Δ / ∇ and press **OK** to access.
-

TV Self Test

Makes a diagnosis of picture or sound problems.

Follow the on-screen instructions.

System Information

Displays the system information of this TV.

Device Information

Displays the device information of this TV.

Optional accessories

3D Eyewear

■ 3D Eyewear





- TY-EP3D20W
(1 pack includes 2 pairs of eyewear)
 - If you need 3D Eyewear additionally, please purchase this optional accessory.
 - Use Panasonic 3D Eyewear for passive 3D.
- For more information:
<http://panasonic.net/viera/support> (English only)

Communication Camera

■ Communication Camera



- TY-CC20W
 - This camera can be used for video communication and face recognition.
 -  → [Network > Internet content > Selecting internet content](#)
 -  → [my Home Screen > my Home Screen > Settings](#)
 - Depending on the area, this optional accessory may not be available. For details, consult your local Panasonic dealer.

Wall-hanging bracket

■ Wall-hanging bracket

Choosing to wall mount the TV shall be done at the owner's risk. Always use a qualified installer to perform a TV wall bracket installation. Incorrect fitting may cause equipment to fall, resulting in injury and product damage. Any such damage will void your warranty.

- Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

= Warning =

- When optional accessories such as wall brackets, etc. are used, always read and follow the manufacturer's installation and usage instructions.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- When installing wall brackets you must ensure the wall bracket is not electrically grounded to metal wall studs. Always ensure that there are no electrical cables, pipes, etc. in the wall before you begin the wall bracket installation.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

Licence

Licence

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

“RealD 3D” is a trademark of RealD.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

SDXC Logo is a trademark of SD-3C, LLC.

“AVCHD”, “AVCHD 3D” and “AVCHD Progressive” are trademarks of Panasonic Corporation and Sony Corporation.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Mac is a trademark of Apple Inc.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

HDAVI Control™ is a trademark of Panasonic Corporation.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Speech Powered by Dragon

2002-2014 Nuance Communications, Inc. All rights reserved.

“PlayReady” is a trademark registered by Microsoft. Please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

© 2013 CSR plc and its group companies.

The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE Version 2.1 (LGPL V2.1) and/or,
- (4) open sourced software other than the software licensed under the LGPL V2.1.

The software categorized as (3) and (4) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

Please refer to the detailed terms and conditions thereof shown in the “Software License” menu on this product.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: cdrequest@unipf.jp

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/EUIDTV14/>

